

Appendice B

Données de mémoires de scènes

Les paramètres suivants sont mémorisés au sein d'une mémoire de scène:

Fader Data	
Parameter No.	Parameter
0-7	Input 1-8 level
8-15	Monitor 1-8 level
16-23	Bus 1-8 master level
24-26	ST input A-C level
27	Stereo master level

Cut Data	
Parameter No.	Parameter
96-103	Input 1-8 on/off
104-111	Monitor 1-8 on/off
112-114	ST input A-C on/off
151	Stereo master on/off

Panpot Data	
Parameter No.	Parameter
28-35	Input 1-8 panpot
36-43	Monitor 1-8 panpot
44-51	Input 1-8 aux 3 panpot
52-57	ST input A-C L & R panpot
58	Stereo master balance
59	Monitor master balance
990-997	Monitor 1-8 aux 3 panpot

Channel Data	
Parameter No.	Parameter
308-315	Channel 1-8 monitor to bus on/off
316-323	Channel 1-8 bus to monitor on/off
785-792	Channel 1-8 fader flip
761-762	ST input A-B internal/external
864	Panpot mode nominal/+3 dB

Aux Data	
Parameter No.	Parameter
60-83	Input 1-8 aux 1, 2, 3 levels
84-92	ST input A-C aux 1, 2, 3 levels
93-95	Aux 1, 2, 3 master send levels
115-122	Input 1-8 aux 1 on/off
123-130	Input 1-8 aux 2 on/off
131-138	Input 1-8 aux 3 on/off
139-147	ST input A-C aux 1, 2, 3 on/off
148-150	Aux 1, 2, 3 master send on/off
251-258	Input 1-8 aux 1 pre/post
259-266	Input 1-8 aux 2 pre/post
267-274	Input 1-8 aux 3 pre/post
275-277	ST input A-C aux 1 pre/post
278-280	ST input A-C aux 2 pre/post
281-283	ST input A-C aux 3 pre/post
284-307	Reserved
998-1021	Monitor 1-8 aux 1, 2, 3 levels
1022-1029	Monitor 1-8 aux 1 on/off
1030-1037	Monitor 1-8 aux 2 on/off
1038-1045	Monitor 1-8 aux 3 on/off
1046-1053	Monitor 1-8 aux 1 pre/post
1054-1061	Monitor 1-8 aux 2 pre/post
1062-1069	Monitor 1-8 aux 3 pre/post

Effect Data	
Parameter No.	Parameter
865	Effect 1 select
866	Effect 2 select
867-886	Effect 1 parameters 1-10
887-906	Effect 2 parameters 1-10

EQ Data	
Parameter No.	Parameter
343-350	Input 1-8 HPF on/off
351-358	Monitor 1-8 HPF on/off
359-361	ST input A-C HPF on/off
362-369	Input 1-8 LPF on/off
370-377	Monitor 1-8 LPF on/off
378-380	ST input A-C LPF on/off
381-388	Input 1-8 HPF frequency
389-396	Monitor 1-8 HPF frequency
397-399	ST input A-C HPF frequency
400-407	Input 1-8 LPF frequency
408-415	Monitor 1-8 LPF frequency
416-418	ST input A-C LPF frequency
419-426	Input 1-8 EQ on/off
427-434	Monitor 1-8 EQ on/off
435-437	ST input A-C EQ on/off
438-565	Input 1-8 low, low mid, high mid, high: frequency, gain, Q, type
566-693	Monitor 1-8 low, low mid, high mid, high: frequency, gain, Q, type
694-741	ST input A-C low, low mid, high mid, high: frequency, gain, Q, type

Assign Data	
Parameter No.	Parameter
152-159	Input 1-8 Stereo bus assign
160-162	ST input A-C Stereo bus assign
163-226	Input 1-8 Bus 1-8 assign
227-250	ST input A-C Bus 1-8 assign

Delay Data	
Parameter No.	Parameter
907-922	Input 1-8 delay time
923-938	Monitor 1-8 delay time
939-944	ST input A-C delay time
945-960	Input 1-8 delay feedback gain
961-976	Monitor 1-8 delay feedback gain
977-982	ST input A-C delay feedback gain

Phase Data	
Parameter No.	Parameter
324-331	Input 1-8 phase normal/reverse
332-339	Monitor 1-8 phase normal/reverse
340-342	ST input A-C phase normal/reverse

Pad Data	
Parameter No.	Parameter
742-749	Input 1-8 pad
750-757	Monitor 1-8 pad
758-760	ST input A-C pad
851-858	Cascade in bus 1-8 pad
859-861	Cascade in Aux 1, 2, 3 pad
862	Cascade in Stereo bus pad
863	Cascade in Solo bus pad

Fade Time Data	
Parameter No.	Parameter
763-770	Input 1-8 fade time
771-778	Monitor 1-8 fade time
779-781	ST input A-C fade time

Données d'installation

Les parenthèses carrées [] indiquent la fonction écran utilisée pour régler la fonction mentionnée.

Console Controls
FADER STATUS (BUS MSTR/channel fader)
CONSOLE STATUS (REC/MIX)
MASTER CHANNEL SELECT (MON/input)
GLOBAL (enable/disable)
STUDIO MONITOR (ON/off)
C-R MONITOR (on/off)
C-R MONITOR (large/SMALL)
CUE (on/off)
C-R MONITOR select (EXT/CUE/ST)
CUE (MON/cue)
C-R MONITOR DIM (ON/off)
C-R MONITOR (MONO/stereo)
METER SELECT HOLD (hold/fall)
METER SELECT I (LINE/TAPE/ST IN)
METER SELECT II (BUS/MONITOR)
METER SELECT III (CUE-MON/AUX)

Meters
Meter I: Input channel (Pre EQ/Post EQ/Post Fader) [Meter]
Meter II: Monitor channel (Pre EQ/Post EQ/Post Fader) [Meter]
Meter III: ST Input (Pre EQ/Post EQ/Post Fader) [Meter]
Meter I: ST IN (INT/EXT) [Meter]
Meter Hold time [Meter]
Meter Fall time [Meter]

Routing
Stereo InputA (INT/EXT) [Routing] [DIO Sel]
Stereo InputB (INT/EXT) [Routing] [DIO Sel]
C-R Monitor ST (After Fader Listen/Pre Fader Listen) [Routing]
AFL (After Fader Listen/Pre Switch Listen/After Panpot Listen) [Routing]
Direct Out (After Fader Listen/Pre Fader Listen/After Switch Listen) [Routing]

Grouping
Group 1 & 2 Grouping Information [Grouping]
Group (Enable/Disable) [Grouping]

Solo
Solo Mode (AFL/SOLO) [SOLO]
SOLO Safe Channels (Input & Monitor 1-8) [SOLO]

M Emphasis
M Format Input Emphasis (Input & Monitor 1-8) [M Emph]

MIDI
MIDI Channel [MIDI]
Control Mode (Channel/Register) [MIDI]
Control Tx (on/off) [MIDI]
Control Rx (on/off) [MIDI]
Control Omni (on/off) [MIDI]
Control Echo (on/off) [MIDI]
Program Tx (on/off) [MIDI]
Program Rx (on/off) [MIDI]
Program Omni (on/off) [MIDI]
Program Echo (on/off) [MIDI]

Bulk
Device No. (off, 1-16) [Bulk]
Omni (on/off) [Bulk]

LCD Function Table
User LCD Function table Setup [Function]

Output Bitshift Setup
Output Bitshift Setup (0-63.75) [BitShift]

Emphasis
Output Emphasis (off/on) [Emphasis]
St. Inputs A-C Emphasis (off/on) [Emphasis]
2TR (Y2) Input (off/on) [Emphasis]

Automation
Motor (On/Off) Automation

AutoCopy
Copy time [AutoCopy]
Copy track [AutoCopy]
Extract parameter [AutoCopy]
Punch IN/OUT (Manual/Auto) [AutoCopy]
Extract (on/off) [AutoCopy]

Fader Edit
Fader take over time (2.9 msec- 21 sec) [Fader Ed]
Fader (RETURN/NO RET) [Fader Ed]

Configuration
Internal Mem. Protect (on/off) [Config.]
Set-up Memory Protect (on/off) [Config.]
Auto Fader Edit Screen (on/off) [Config.]
Auto EQ Screen (on/off) [Config.]
Auto C-R monitor Screen (on/off) [Config.]
Auto Effect Screen (on/off) [Config.]
Equalizer Constant (Q/Energy) [Config.]
AUX Send Ducking (on/off) [Config.]
Automation REC Mode (Insert/Replace) [Config.] Automation
Fader Edit Mode (Relative/Absolute) [Config.] Automation
Absolute Up-date Mode (REC Trk/ALL Trk) [Config.]
Automation Locate (Quick/Full) [Config.]
Bus Stereo Link (on/off) [Config.]
Time Code Frame Erase (off/on) [Config.]
CD/DAT Copy Prohibit (off/on) [Config.]
Remote Parity (Even/Odd/None) [Config.]
Noise Shaping (off/on) [Config.]
Noise Shaping bit No. (16-26) [Config.]
Grouping Memory (Scene/Setup) [Config.]
Link Parameter Memory (Scene/Setup) [Config.]
Mem Store Confirmation (off/on) [Config.]
Mem Recall Confirmation (off/on) [Config.]
Title Store Prohibit (off/on) [Config.]
Store Req.IN Prohibit (off/on) [Config.]
Store Req.OUT Prohibit (off/on) [Config.]
Auto.PLAY→MIDI Out (off/on) [Config.]
MIDI In → Auto.REC (off/on) [Config.]
Auto Clock Display (off/on) [Config.]
SetupMem Change BULK Out (off/on) [Config.]
TD Drop Warning Prohibit (off/on) [Config.]
S/R prm. to Scene Mem. (off/on) [Config.]
ESAM2 Source Mode (A/B)
Keep Touch Mode (off/on) [Config.]

Channel Link
Channel Link (disable/enable) [Ch Link]
Channel Link parameters [Ch Link]
Channel Link channel information [Ch Link]

Digital I/O Setup
INP 7/8 in (INPUT/2TRK) [DIO Sel.]
ST Input A-C (Digital/Analog) [DIO Sel.]

Output Format
BUS (Y1/Y2/SDIF2/M) [O.Format]
INPUT Direct (Y1/Y2/SDIF2/M) [O.Format]
MONITOR Direct (Y1/Y2/SDIF2/M) [O.Format]
ST Input Direct (Y1/Y2/SDIF2/M) [O.Format]

External Monitor Select
2TR Monitor Input Select [EXT Mon]

Wordclock Select
Source [WCLK Sel]
Input [WCLK Sel]
Output [WCLK Sel]
Int.Fs [WCLK Sel]

Timecode
Start Time [TimeCode]
Frame Type [TimeCode]
Source [TimeCode]

Insert on/off Setup
INP (off/on) [Ins. On]
MON (off/on) [Ins. On]
ST Input A-C (off/on) [Ins. On]
ST Master (off/on) [Ins. On]
Input 1-8 (pst/pre) [Ins. Pre]
Monitor 1-8 (pst/pre) [Ins. Pre]
ST Input A-C (pst/pre) [Ins. Pre]

CUE Select
Cue bus Select Menu (Aux 1/2/3) [CUE Sel]

Talkback
Talkback & slate to Bus 1-8 assign [Talkback]

Cascade Isolate
Bus 1-8 (off/on) [Cas Iso.]
Aux A-C (off/on) [Cas Iso.]
Stereo (off/on) [Cas Iso.]
SOLO (off/on) [Cas Iso.]

Automation Record Parameters
Automation REC Parameters [REC Prm]

Input Format
Input Channel Format Select [I.Format]
Monitor Channel Format Select [I.Format]
2Track In Format Select [I.Format]

Spécifications techniques

Canal d'entrée, canal de surveillance et canal d'entrée stéréo	Pad	0 à 96 dB (par pas de 0,8 dB)
	Phase	Normale/inversée
	Emphase	Emphase, thru, désémphasisé
	Fréquence EQ	20Hz à 20 kHz (pour toutes les quatre bandes)
	Gain	±18 dB
	Q	0,1 à 8,16
	Type	1 & 4 commutateur pointe/creux. 2 & 3 pointe.
	Retard	0 à 370 ms (Fréq. Echantillonnage @ 44.1 kHz)
Fader	100 mm motorisé, avec sélection au toucher	
Conversion AN		18 bits
Conversion NA		20 bit, avec filtre numérique à 8 suréchantillonnages
Fréquence de réponse	Fréquence d'échantillonnage @ 44.1/48 kHz	20 Hz à 20 kHz, 0 +1 -3 dB
	Fréquence d'échantillonnage @ 32 kHz	20 Hz à 14 kHz, 0 +1 -3 dB
THD		<0.007% (@ +18 dB, 1 kHz)
Résolution numérique E/S		16 à 24 bits
Résolution de traitement interne	Générale	24 bits
	EQ	32 bits
Horloge	Interne	44,1 kHz, 48 kHz
	Externe	32 kHz à 48 kHz ±10%
Mémorisation de données	Automation interne	512 KB (128 KB par piste)
	Disquette	3,5" 2DD (MS-DOS 720 KB format compatible)
	Carte RAM	Yamaha MCD64 (64 Kbytes)
Compteurs	Stéréo	2 x 32-LED
	Canaux	8 x 12-LED
	Bus	8 x 12-LED
	Moniteur Aux/C-R	4 x 12-LED
Ecran		Affichage de 40 x 8 caractères (avec réglage de contraste), rétroéclairé
Allimentation	Modèles US et canadien	120V AC, 60 Hz
	Modèle courant	230V AC, 50 Hz
	Modèle britannique	240V AC, 50 Hz
Consommation		180 W
Plage de températures pour le fonctionnement		0° à 35°C (32°F à 95°F)
Encombrement	(L x P x H)	770 x 904,2 x 362,5 mm (30,3" x 35,6" x 14,3")
Poids		57 kg (125,7 lbs)

Spécifications des entrées et des sorties analogiques

Connexion d'entrée/sortie	Impédance nominale E/S	Niveau d'entrée (@ 1 kHz)		Connecteur du DMC1000
		Nominal	Max. avant clip	
ST INPUT (ANALOG) A, B, & C	600 Ω	+4 dBm (1,23V)	+18 dBm (6,16V)	Type XLR331
AUX SEND (ANALOG) 1, 2, & 3	600 Ω	+4 dBm (1,23V)	+18 dBm (6,16V)	Type XLR332
MONITOR OUT (ANALOG) LARGE, SMALL, STUDIO, & CUE	600 Ω	+4 dBm (1,23V)	+18 dBm (6,16V)	Type XLR332
PHONES	8 Ω			Prise casque
	40 Ω			

* 0 dBm = 0,775V rms.

Spécifications des entrées numériques

Entrée	Format	Niveau	Connecteur du DMC1000
INPUT CHANNEL INSERT I/O (Canaux 1 à 8, horloge, emphase)	Y2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
MONITOR CHANNEL INSERT I/O (MONITOR 1 à 8, horloge, emphase)	Y2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
INPUT CHANNEL DIGITAL I/O (CH 1 à 8 in, 1 à 8 Bus out, horloge, emphase)	Y2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
MONITOR CHANNEL DIGITAL I/O (MONITOR 1 à 8 in, 1 à 8 Bus out, horloge, emphase)	Y2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
ST INPUT INSERT I/O (ST A, ST B, ST C, Bus 1 à 8 out, horloge, emphase)	Y2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
INPUT CHANNEL IN (CH 1 à 8, horloge binaire, horloge, emphase)	Y1 Y2 Mitsubishi SDIF2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
MONITOR CHANNEL IN (MONITOR 1 à 8, horloge binaire, horloge, emphase)	Y1 Y2 Mitsubishi SDIF2	RS422 (emphase: TTL)	D-Sub à 25 broches (femelle)
INPUT CHANNEL INPUT AES 1/2, 3/4, 5/6, 7/8	AES/EBU	RS422	Type XLR331
ST INPUT A, B, & C Y2	Y2	RS422	DIN à 8 broches
Y2 2TR MONITOR INPUT (7-8)	Y2	RS422	DIN à 8 broches
SDIF2 L & R 2TR MONITOR INPUT (7-8)	SDIF2	TTL	BNC
SYNC 2TR MONITOR INPUT (7-8)	-	TTL	BNC
AES/EBU 2TR MONITOR INPUT (7-8)	AES/EBU	RS422	Type XLR331
CD/DAT1 2TR MONITOR INPUT (7-8)	S/PDIF	0.5V pointe à pointe	RCA/phono
CD/DAT2 2TR MONITOR INPUT (7-8)	S/PDIF	0.5V pointe à pointe	RCA/phono
STEREO INSERT IN Y2	Y2	RS422	DIN à 8 broches
CASCADE INPUT (Bus 1 à 8, bus Stéréo, bus Stéréo, bus auxiliaires, horloge, sélection solo/AFL, commande solo, emphase)	Y2	RS422 (sélection solo/AFL, commande solo, & emphase: TTL)	D-Sub à 25 broches (femelle)
WORD CLK IN	-	RS422	Type XLR331
		TTL	BNC

Spécifications des sorties numériques

Sortie	Format	Niveau	Connecteur DMC1000
INPUT CHANNEL DIRECT OUT (CH 1 à 8, horloge, emphase)	Y1 Y2 Mitsubishi SDIF2	RS422 (emphasis: TTL)	D-Sub à 25 broches, femelle
MONITOR CHANNEL DIRECT OUT (MONITOR 1 à 8, horloge, emphase)	Y1 Y2 Mitsubishi SDIF2	RS422 (emphasis: TTL)	D-Sub à 25 broches, femelle
ST INPUT AC DIRECT OUT (ST A, ST B, ST C, horloge, emphase)	Y1 Y2 Mitsubishi SDIF2	RS422 (emphasis: TTL)	D-Sub à 25 broches, femelle
BUS OUT (Bus 1 à 8, horloge binaire - Mitsubishi uniquement, horloge, emphase)	Y1 Y2 Mitsubishi SDIF2	RS422 (emphasis: TTL)	D-Sub à 25 broches, femelle
BUS OUT AES/EBU 1/2, 3/4, 5/6, & 7/8	AES/EBU	RS422	Type XLR332
STEREO OUT Y2	Y2	RS422	DIN à 8 broches
STEREO OUT SDIF2 L & R	SDIF2	RS422	Type XLR332
STEREO OUT SDIF2 L & R	SDIF2	TTL	BNC
STEREO OUT AES/EBU	AES/EBU	RS422	Type XLR332
STEREO OUT CD/DAT	S/PDIF	0.5V pk à pk	RCA/phono
STEREO INSERT OUT Y2	Y2	RS422	DIN à 8 broches
AUX SEND 1, 2, & 3	Y1	RS422	DIN à 8 broches
CR MONITOR OUT AES/EBU	AES/EBU	RS422	Type XLR332
C-R MONITOR OUT Y2	Y2	RS422	Type XLR332
CASCADE OUT (Bus 1 à 8, bus Stéréo, bus Solo, bus Auxiliaires, horloge, sélection solo/AFL, commande solo, emphase)	Y2	RS422 (sélection solo/AFL, commande solo, & emphase: TTL)	D-Sub à 25 broches, femelle
WORD CLK OUT	-	RS422	Type XLR332
	-	TTL	BNC

Sorties de connecteurs à broches

- CHANNEL DIGITAL I/O
- CHANNEL INSERT I/O
- MONITOR DIGITAL I/O
- MONITOR CHANNEL DIGITAL I/O
- ST INPUT A-C INSERT I/O

Signal Name	Pin Assignment	
	Hot	Cold
Data In Ch 1 - 2	1	14
Data In Ch 3 - 4	2	15
Data In Ch 5 - 6	3	16
Data In Ch 7 - 8	4	17
Data Out Ch 1 - 2	5	18
Data Out Ch 3 - 4	6	19
Data Out Ch 5 - 6	7	20
Data Out Ch 7 - 8	8	21
Wordclock In	9	22
Wordclock Out	10	23
Emphasis In	11	
Emphasis Out	12	
GND	13, 24, 25	

- INPUT CHANNEL
- MONITOR INPUT

Signal Name	Pin Assignment	
	Hot	Cold
Data In Ch 1	1	14
Data In Ch 2	2	15
Data In Ch 3	3	16
Data In Ch 4	4	17
Data In Ch 5	5	18
Data In Ch 6	6	19
Data In Ch 7	7	20
Data In Ch 8	8	21
Wordclock In	9	22
Wordclock Out	10	23
Bit Clock In (Mitsubishi)	11	24
Emphasis In	12	
GND	13, 25	

- INPUT CHANNEL DIRECT OUT
- MONITOR CHANNEL DIRECT OUT
- ST INPUT A-C DIRECT OUT
- BUS OUT 1~8

Signal Name	Pin Assignment	
	Hot	Cold
Data Out Ch 1	1	14
Data Out Ch 2	2	15
Data Out Ch 3	3	16
Data Out Ch 4	4	17
Data Out Ch 5	5	18
Data Out Ch 6	6	19
Data Out Ch 7	7	20
Data Out Ch 8	8	21
Wordclock Out	9	22
Wordclock In	10	23
Bit Clock Out (Mitsubishi)	11	24
Emphasis Out	12	
GND	13, 25	

- CASCADE IN

Signal Name	Pin Assignment	
	Hot	Cold
Bus 1-2 In	1	14
Bus 3-4 In	2	15
Bus 5-6 In	3	16
Bus 7-8 In	4	17
St In	5	18
Moni In	6	19
Aux 1 & 2 In	7	20
Aux 3 In	8	21
Wordclock In	9	22
Solo Control In	10	
Solo Select In	23	
Master Out	11	
Spare In	24	
Emphasis In	12	
GND	13, 25	

• CASCADE OUT


Signal Name	Pin Assignment	
	Hot	Cold
Bus 1-2 Out	1	14
Bus 3-4 Out	2	15
Bus 5-6 Out	3	16
Bus 7-8 Out	4	17
St Out	5	18
Moni Out	6	19
Aux 1 & 2 Out	7	20
Aux 3 Out	8	21
Wordclock Out	9	22
Solo Control Out	10	
Solo Select Out	23	
Master In	11	
Spare Out	24	
Emphasis Out	12	
GND	13, 25	

• REMOTE

Signal Name	Pin Assignment	
	Hot	Cold
Tx	7	2
Rx	3	8
Common	4, 6	
Frame GND	1, 9	

Format de données MIDI

1. Réception

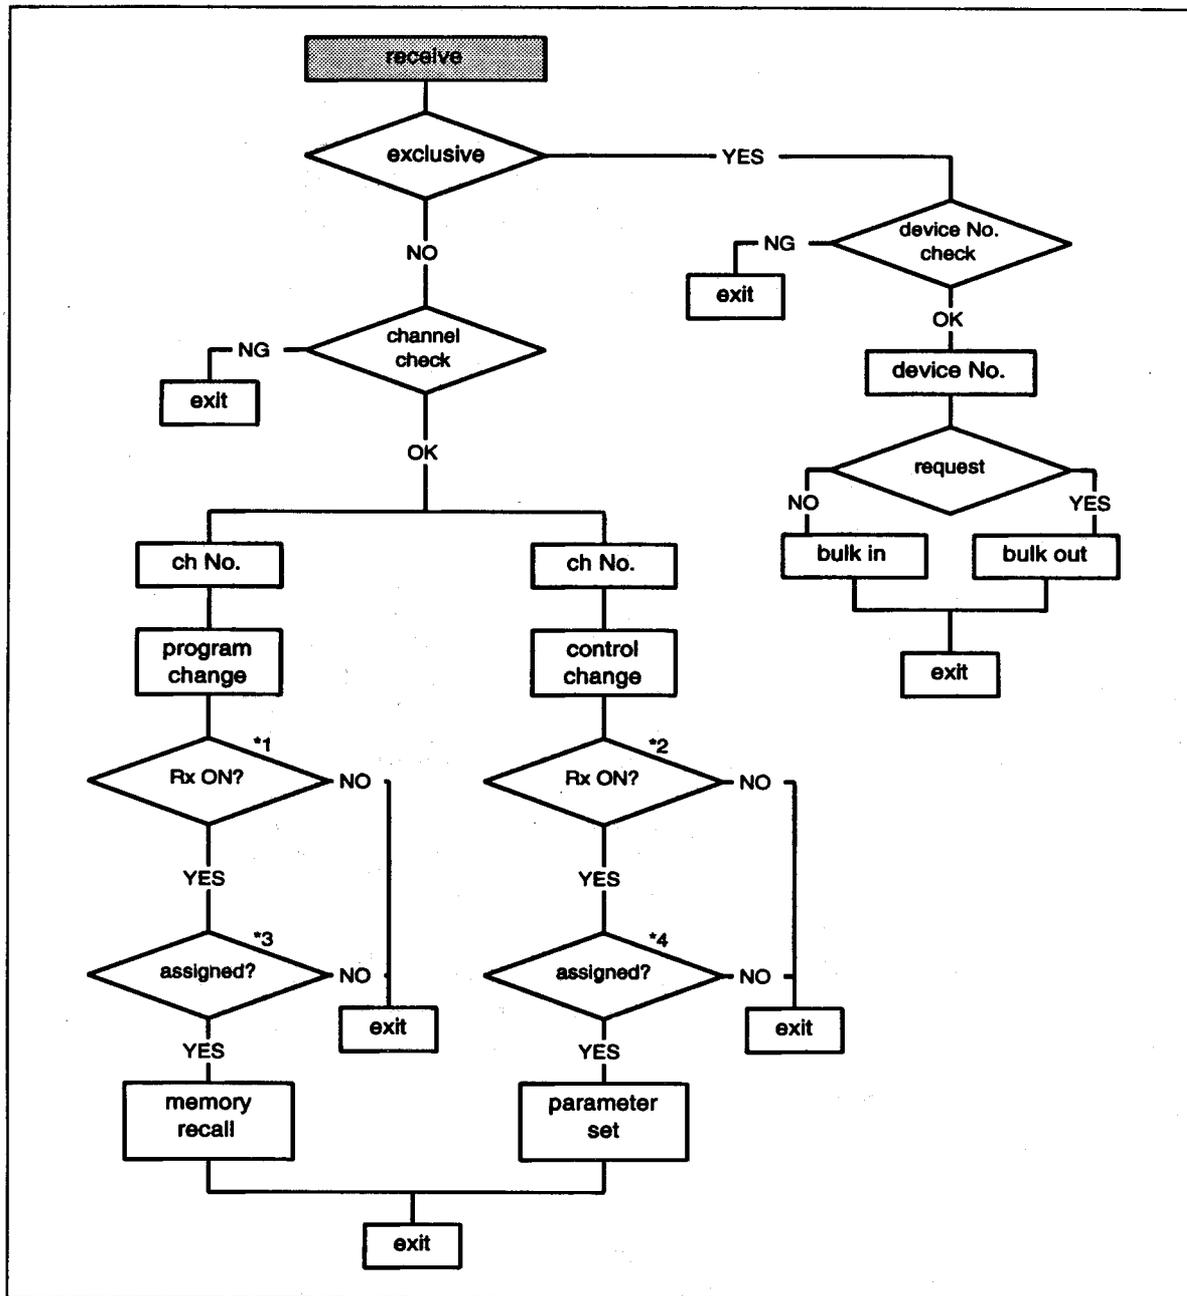


* 1 La fonction "Program Rx" peut être activée ou désactivée. Voir "Installation de base" page 140.

* 2 La fonction "Control Rx" peut être activée ou désactivée. Voir "Installation de base" page 140.

* 3 Veuillez consulter le "Tableau d'Assignations de Changements de Programmes MIDI" page 211.

* 4 Veuillez consulter le "Tableau d'Assignations de Contrôleurs MIDI" page 212.

2. Envoi

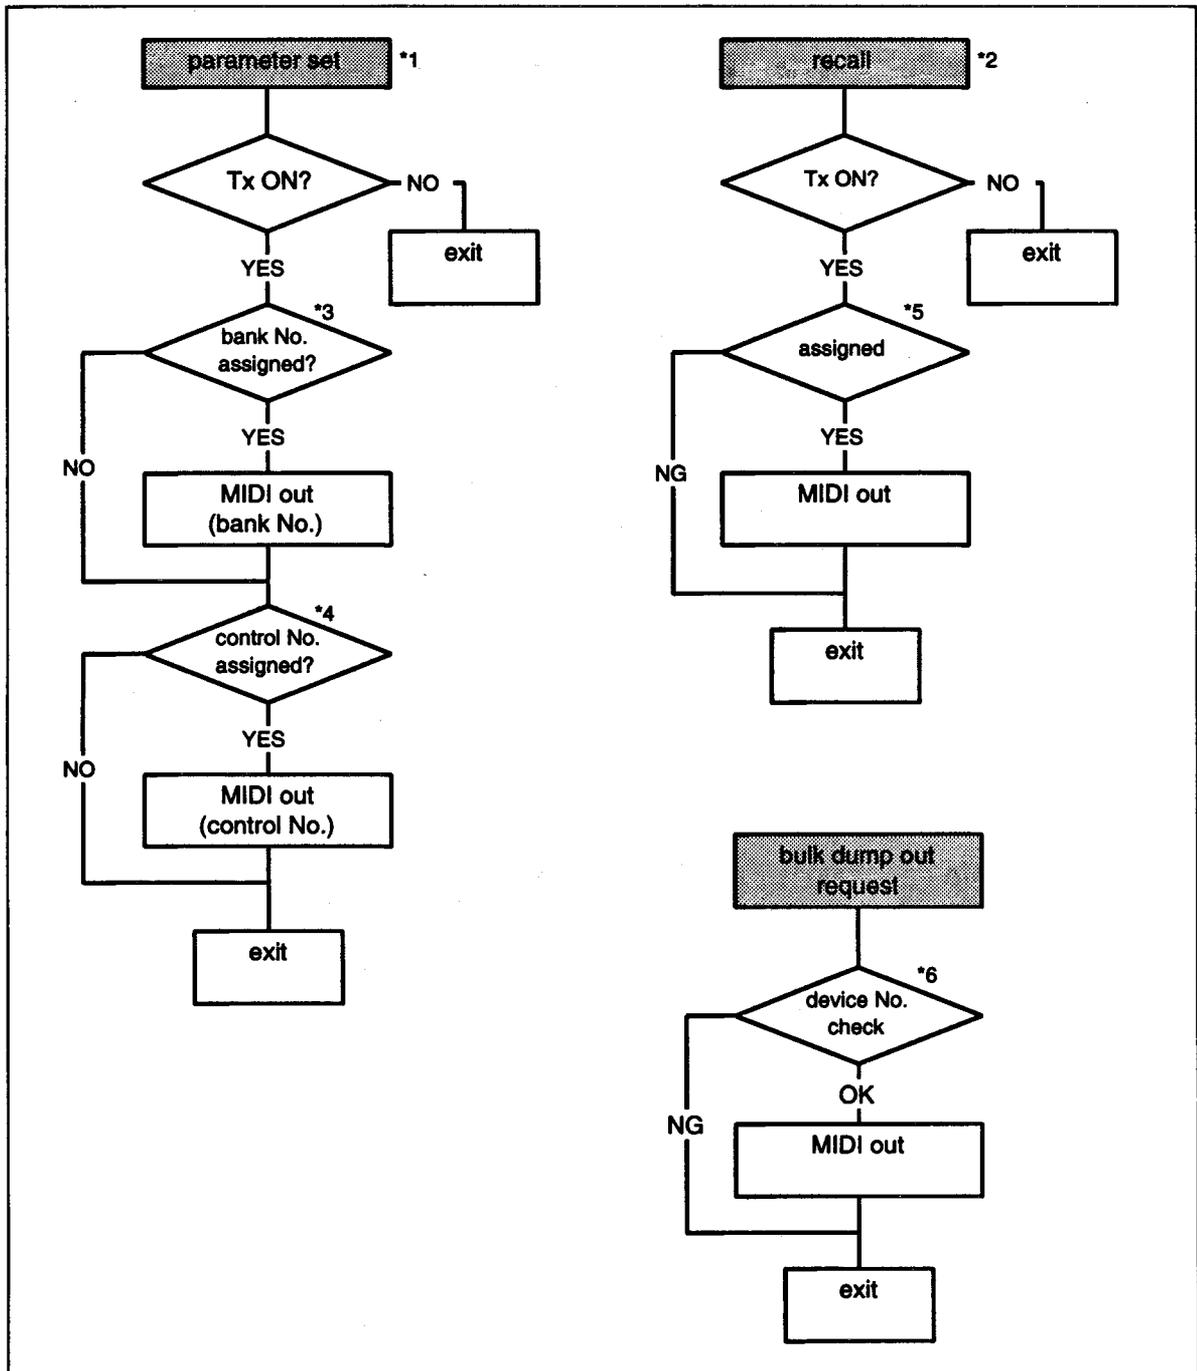

* 1 Paramètre modifié sur le DMC1000.

* 2 Mémoire de scène rappelée sur le DMC1000.

* 3 Veuillez consulter le "Tableau d'Assignations de Contrôleurs MIDI" page 212.

 
* 4 Veuillez consulter le "Tableau d'Assignations de Contrôleurs MIDI" page 212.

* 5 Veuillez consulter le "Tableau d'Assignations de Changements de Programmes MIDI" page 211.

 
* 6 Lorsque la fonction "Device No" est mise sur off, aucun envoi ne peut être effectué.

3. Format de vidage de blocs de données

3-1. Bloc de données de mémoires de scènes internes

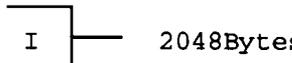STATUS	11110000	F0	
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0000nnnn	0n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP
BYTE COUNT	00010000	10	(High)
BYTE COUNT	00001010	0A	(Low)
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01001101	4D	'M'
MEMORY No.	0mmmmmmmm	mm	mmmmmmmm= 1(01h)~64(40h) 127(7Fh)...EDIT BUFFER
DATA	0ddddddd	dd	
	0ddddddd	dd	
CHECK SUM	0eeeeeee	ee	*1
EOX	11110111	F7	END OF EXCLUSIVE

3-2. Bloc de données de mémoires de scènes sur carte RAM (externes)

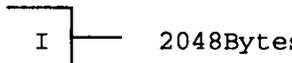STATUS	11110000	F0	
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0000nnnn	0n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP
BYTE COUNT	00010000	10	(High)
BYTE COUNT	00001010	0A	(Low)
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010010	52	'R'
BANK&MEM No.	0bbmmmmmm	??	bb=0(Bank A)~1(Bank B) mmmmmm=0(Memory No.0)~31(Memory No.31)
DATA	0ddddddd	dd	
	0ddddddd	dd	
CHECK SUM	0eeeeeee	ee	*1
EOX	11110111	F7	END OF EXCLUSIVE

3-3. Blocs de données d'assignations de changements de programmes

STATUS	11110000	F0	
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0000nnnn	0n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP
BYTE COUNT	00000010	02	(High)
BYTE COUNT	00001010	0A	(Low)
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010000	50	'P'
	00100000	20	' '(SPACE)
DATA	0ddddddd	dd	II — 256Bytes
	↓		
	0ddddddd	dd	
CHECK SUM	0eeeeeee	ee	*1
EOX	11110111	F7	END OF EXCLUSIVE

3-4. Blocs de données d'assignations de contrôleurs

STATUS	11110000	F0	
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0000nnnn	0n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP
BYTE COUNT	00010000	24	(High)
BYTE COUNT	00001010	0A	(Low)
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01000011	43	'C'
	00100000	20	' '(SPACE)
DATA	0ddddddd	dd	III — 4608Bytes
	↓		
	0ddddddd	dd	
CHECK SUM	0eeeeeee	ee	*1
EOX	11110111	F7	END OF EXCLUSIVE

3-5. Blocs de données d'installation

STATUS	11110000	F0	
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0000nnnn	0n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP
BYTE COUNT	00000000	00	(High)
BYTE COUNT	01100101	65	(Low)
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010011	53	'S'
	00100000	20	' '(SPACE)
DATA	0ddddddd	dd	<div style="border: 1px solid black; display: inline-block; padding: 2px;">IV</div> — 512Bytes
	↓	0ddddddd	
CHECK SUM	0eeeeeee	ee	*1
EOX	11110111	F7	END OF EXCLUSIVE

*1: Tous les bits de données seront inversés (augmentés d'une unité) et le bit le plus significatif (le bit 7) deviendra 0, suite à l'opération OR exclusive de "L" après BYTE COUNT (le décompte des octets) et ce jusqu'à CHECK SUM (somme de vérification) non comprise.

4. Demande de transfert de blocs de données

4-1. Demande de transfert de bloc de données des mémoires de scènes internes

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01001101	53	'M'
MEMORY No.	0mmmmmmmm	mm	mmmmmmmm= 1(01h)~64(40h) (127(7Fh)...EDIT BUFFER)
EOX	11110111	F7	

4-2. Demande de transfert de bloc de données des mémoires de scènes de la carte RAM (externe)

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01000011	52	'R'
BANK&MEM No.	0bbmmmmmm	??	bb=0 (Bank A)~1 (Bank B) mmmmmm=0 (Memory No.0)~31 (Memory No.31)
EOX	11110111	F7	

4-3. Demande de transfert des assignations de changements de programmes

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010000	50	'P'
	00100000	20	' '(SPACE)
EOX	11110111	F7	

4-4. Demande de transfert des assignations de contrôleurs

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01000011	50	'C'
	00100000	20	' '(SPACE)
EOX	11110111	F7	

4-5. Demande de transfert des données d'installation

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010011	50	'S'
	00100000	20	' '(SPACE)
EOX	11110111	F7	

4-6. Demande de sauvegarde des mémoires de scènes

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010111	50	'W'
MEMORY No.	0mmmmmmmm	mm	mmmmmmmm= 1 (Mem. No.1)~64 (Mem.No.64)
EOX	11110111	F7	

* Le DMC1000 émet cette demande chaque fois qu'une mémoire de scènes est sauvegardée.

4-7. Demande des modifications apportées aux données d'installation

STATUS	11110000	F0	SYSTEM EXCLUSIVE
ID No.	01000011	43	(YAMAHA)
SUB STATUS	0010nnnn	2n	nnnn=0~15 (Device No.1~16)
FORMAT No.	01111110	7E	UNIVERSAL BULK DUMP REQUEST
	01001100	4C	'L'
	01001101	4D	'M'
	00100000	20	' '(SPACE)
	00100000	20	' '(SPACE)
	00111000	38	'8'
	00110110	36	'6'
	00110000	30	'0'
	00110110	36	'6'
DATA NAME	01010011	23	'#'
EOX	11110111	F7	

* Le DMC1000 émet cette requête lorsque ses données d'installation ont été modifiées.

Le DMC1000 n'envoie pas le message lorsque les données d'installation sont modifiées par un contrôleur MIDI.

5. Vidage de blocs de données

5-1. Blocs de données de mémoires de scènes

DMC1000's 1 Memory (1024bytes)		Memory Bulk (2048bytes)
D000	↔	M0000, M0001
D001	↔	M0002, M0003
D002	↔	M0004, M0005
.		.
.		.
D1022	↔	M2044, M2045
D1023	↔	M2046, M2047
<D000-D1023	↔	<M0000-M1027>
M0000 = ASCII (D000/16 and 0fh)		... High
M0001 = ASCII (D000 and 0fh)		... Low

5-2. Changements de programmes

DMC1000's 1 Bank Table (128bytes)		Table Bulk (256bytes)
Program No.	Memory No.	
0	D000	↔ M000, M001
1	D001	↔ M002, M003
2	D002	↔ M004, M005
.	.	.
.	.	.
126	D126	↔ M252, M253
127	D127	↔ M254, M255
	<D000-D127	↔ <M000-M255>
M000 = ASCII (D000/16 and 0fh)		... Program Change No. High (0~64, 255)
M001 = ASCII (D000 and 0fh)		... Low
[Dnnn=0, 1, ..., 64, 255(not assign)]		

5-3. Contrôleur

DMC1000's Assign Table (2304bytes)			Table Bulk (4608bytes)	
Prm.No.	Bank No.	Control No.		
0	D0000	D0001	↔	M0000,M0001,M0002,M0003
1	D0002	D0003	↔	M0004,M0005,M0006,M0007
2	D0004	D0005	↔	M0008,M0009,M0010,M0011
.				.
.				.
1150	D2300	D2301	↔	M4600,M4601,M4602,M4603
1151	D2302	D2302	↔	M4604,M4605,M4606,M4607
	<D0000-D2303		↔	M0000-M4607>

M0000 = ASCII (D0000/16 and 0fh) ... Bank No. High(0~11)
 M0001 = ASCII (D0000 and 0fh) ... Low
 M0002 = ASCII (D0000/16 and 0fh) ... Control No. High(0~95)
 M0003 = ASCII (D0000 and 0fh) ... Low

5-4. Installation

DMC1000's Memory Table (256bytes)		Table Bulk(512bytes)	
D000		↔	M000,M001
D001		↔	M002,M003
D002		↔	M004,M005
.			.
.			.
D254		↔	M508,M509
D255		↔	M510,M511
	<D000-D255	↔	M000-M511>

M000 = ASCII (D000/16 and 0fh) ... Memory High ('0'~'f')
 M001 = ASCII (D000 and 0fh) ... Low

Tableau d'assignations de changements de programmes MIDI

Program Change No.	Initial Scene Memory No.	User Scene Memory No.
1	1	
2	2	
3	3	
4	4	
5	5	
6	6	
7	7	
8	8	
9	9	
10	10	
11	11	
12	12	
13	13	
14	14	
15	15	
16	16	
17	17	
18	18	
19	19	
20	20	
21	21	
22	22	
23	23	
24	24	
25	25	
26	26	
27	27	
28	28	
29	29	
30	30	
31	31	
32	32	
33	33	
34	34	
35	35	
36	36	
37	37	
38	38	
39	39	
40	40	
41	41	
42	42	
43	43	

Program Change No.	Initial Scene Memory No.	User Scene Memory No.
44	44	
45	45	
46	46	
47	47	
48	48	
49	49	
50	50	
51	51	
52	52	
53	53	
54	54	
55	55	
56	56	
57	57	
58	58	
59	59	
60	60	
61	61	
62	62	
63	63	
64	64	
65	65	
66	66	
67	67	
68	68	
69	69	
70	70	
71	71	
72	72	
73	73	
74	74	
75	75	
76	76	
77	77	
78	78	
79	79	
80	80	
81	81	
82	82	
83	83	
84	84	
85	85	
86	86	

Program Change No.	Initial Scene Memory No.	User Scene Memory No.
87	87	
88	88	
89	89	
90	90	
91	91	
92	92	
93	93	
94	94	
95	95	
96	96	
97	0	
98		
99		
100		
101		
102		
103		
104		
105		
106		
107		
108		
109		
110		
111		
112		
113		
114		
115		
116		
117		
118		
119		
120		
121		
122		
123		
124		
125		
126		
127		
128		

Tableau d'assignations de Contrôleurs MIDI

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
0	0	0	Input 1 level		
1	1		Input 2 level		
2	2		Input 3 level		
3	3		Input 4 level		
4	4		Input 5 level		
5	5		Input 6 level		
6	6		Input 7 level		
7	7		Input 8 level		
8	8		Monitor 1 level		
9	9		Monitor 2 level		
10	10		Monitor 3 level		
11	11		Monitor 4 level		
12	12		Monitor 5 level		
13	13		Monitor 6 level		
14	14		Monitor 7 level		
15	15		Monitor 8 level		
16	16		Bus 1 master level		
17	17		Bus 2 master level		
18	18		Bus 3 master level		
19	19		Bus 4 master level		
20	20		Bus 5 master level		
21	21		Bus 6 master level		
22	22		Bus 7 master level		
23	23		Bus 8 master level		
24	24		ST Input A level		
25	25		ST Input B level		
26	26		ST Input C level		
27	27		Stereo master level		
28	28		Input 1 bus pan		
29	29		Input 2 bus pan		
30	30		Input 3 bus pan		
31	31		Input 4 bus pan		
32	32		Input 5 bus pan		
33	33		Input 6 bus pan		
34	34		Input 7 bus pan		
35	35		Input 8 bus pan		
36	36		Monitor 1 pan		
37	37		Monitor 2 pan		
38	38		Monitor 3 pan		
39	39		Monitor 4 pan		
40	40		Monitor 5 pan		
41	41		Monitor 6 pan		
42	42		Monitor 7 pan		
43	43		Monitor 8 pan		
44	44		Input 1 aux3 pan		
45	45		Input 2 aux3 pan		
46	46		Input 3 aux3 pan		
47	47	Input 4 aux3 pan			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
48	48	0	Input 5 aux3 pan		
49	49		Input 6 aux3 pan		
50	50		Input 7 aux3 pan		
51	51		Input 8 aux3 pan		
52	52		ST Input A L-ch pan		
53	53		ST Input B L-ch pan		
54	54		ST Input C L-ch pan		
55	55		ST Input A R-ch pan		
56	56		ST Input B R-ch pan		
57	57		ST Input C R-ch pan		
58	58		Stereo master balance		
59	59		Monitor master balance		
60	60		Input 1 aux1 level		
61	61		Input 1 aux2 level		
62	62		Input 1 aux3 level		
63	63		Input 2 aux1 level		
64	64		Input 2 aux2 level		
65	65		Input 2 aux3 level		
66	66		Input 3 aux1 level		
67	67		Input 3 aux2 level		
68	68		Input 3 aux3 level		
69	69		Input 4 aux1 level		
70	70		Input 4 aux2 level		
71	71		Input 4 aux3 level		
72	72		Input 5 aux1 level		
73	73		Input 5 aux2 level		
74	74		Input 5 aux3 level		
75	75		Input 6 aux1 level		
76	76		Input 6 aux2 level		
77	77		Input 6 aux3 level		
78	78		Input 7 aux1 level		
79	79		Input 7 aux2 level		
80	80		Input 7 aux3 level		
81	81		Input 8 aux1 level		
82	82		Input 8 aux2 level		
83	83		Input 8 aux3 level		
84	84		ST Input A aux1 level		
85	85		ST Input A aux2 level		
86	86		ST Input A aux3 level		
87	87		ST Input B aux1 level		
88	88		ST Input B aux2 level		
89	89		ST Input B aux3 level		
90	90		ST Input C aux1 level		
91	91		ST Input C aux2 level		
92	92		ST Input C aux3 level		
93	93		Aux Send 1 master level		
94	94		Aux Send 2 master level		
95	95		Aux Send 3 master level		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
96	0	1	Input 1 on/off		
97	1		Input 2 on/off		
98	2		Input 3 on/off		
99	3		Input 4 on/off		
100	4		Input 5 on/off		
101	5		Input 6 on/off		
102	6		Input 7 on/off		
103	7		Input 8 on/off		
104	8		Monitor 1 on/off		
105	9		Monitor 2 on/off		
106	10		Monitor 3 on/off		
107	11		Monitor 4 on/off		
108	12		Monitor 5 on/off		
109	13		Monitor 6 on/off		
110	14		Monitor 7 on/off		
111	15		Monitor 8 on/off		
112	16		ST Input A on/off		
113	17		ST Input B on/off		
114	18		ST Input C on/off		
115	19		Input 1 aux1 on/off		
116	20		Input 2 aux1 on/off		
117	21		Input 3 aux1 on/off		
118	22		Input 4 aux1 on/off		
119	23		Input 5 aux1 on/off		
120	24		Input 6 aux1 on/off		
121	25		Input 7 aux1 on/off		
122	26		Input 8 aux1 on/off		
123	27		Input 1 aux2 on/off		
124	28		Input 2 aux2 on/off		
125	29		Input 3 aux2 on/off		
126	30		Input 4 aux2 on/off		
127	31		Input 5 aux2 on/off		
128	32		Input 6 aux2 on/off		
129	33		Input 7 aux2 on/off		
130	34		Input 8 aux2 on/off		
131	35		Input 1 aux3 on/off		
132	36		Input 2 aux3 on/off		
133	37		Input 3 aux3 on/off		
134	38		Input 4 aux3 on/off		
135	39		Input 5 aux3 on/off		
136	40		Input 6 aux3 on/off		
137	41		Input 7 aux3 on/off		
138	42		Input 8 aux3 on/off		
139	43		ST Input A aux1 on/off		
140	44		ST Input B aux1 on/off		
141	45		ST Input C aux1 on/off		
142	46		ST Input A aux2 on/off		
143	47		ST Input B aux2 on/off		
144	48	ST Input C aux2 on/off			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
145	49	1	ST Input A aux3 on/off		
146	50		ST Input B aux3 on/off		
147	51		ST Input C aux3 on/off		
148	52		Aux Send 1 master on/off		
149	53		Aux Send 2 master on/off		
150	54		Aux Send 3 master on/off		
151	55		Stereo master on/off		
152	56		Input 1 stereo bus assign		
153	57		Input 2 stereo bus assign		
154	58		Input 3 stereo bus assign		
155	59		Input 4 stereo bus assign		
156	60		Input 5 stereo bus assign		
157	61		Input 6 stereo bus assign		
158	62		Input 7 stereo bus assign		
159	63		Input 8 stereo bus assign		
160	64		ST Input A stereo bus assign		
161	65		ST Input B stereo bus assign		
162	66		ST Input C stereo bus assign		
163	67		Input 1 program bus 1 assign		
164	68		Input 1 program bus 2 assign		
165	69		Input 1 program bus 3 assign		
166	70		Input 1 program bus 4 assign		
167	71		Input 1 program bus 5 assign		
168	72		Input 1 program bus 6 assign		
169	73		Input 1 program bus 7 assign		
170	74		Input 1 program bus 8 assign		
171	75		Input 2 program bus 1 assign		
172	76		Input 2 program bus 2 assign		
173	77		Input 2 program bus 3 assign		
174	78		Input 2 program bus 4 assign		
175	79		Input 2 program bus 5 assign		
176	80		Input 2 program bus 6 assign		
177	81		Input 2 program bus 7 assign		
178	82		Input 2 program bus 8 assign		
179	83		Input 3 program bus 1 assign		
180	84		Input 3 program bus 2 assign		
181	85		Input 3 program bus 3 assign		
182	86		Input 3 program bus 4 assign		
183	87		Input 3 program bus 5 assign		
184	88		Input 3 program bus 6 assign		
185	89		Input 3 program bus 7 assign		
186	90		Input 3 program bus 8 assign		
187	91		Input 4 program bus 1 assign		
188	92		Input 4 program bus 2 assign		
189	93		Input 4 program bus 3 assign		
190	94		Input 4 program bus 4 assign		
191	95		Input 4 program bus 5 assign		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
192	0	2	Input 4 program bus 6 assign		
193	1		Input 4 program bus 7 assign		
194	2		Input 4 program bus 8 assign		
195	3		Input 5 program bus 1 assign		
196	4		Input 5 program bus 2 assign		
197	5		Input 5 program bus 3 assign		
198	6		Input 5 program bus 4 assign		
199	7		Input 5 program bus 5 assign		
200	8		Input 5 Program bus 6 assign		
201	9		Input 5 Program bus 7 assign		
202	10		Input 5 Program bus 8 assign		
203	11		Input 6 Program bus 1 assign		
204	12		Input 6 Program bus 2 assign		
205	13		Input 6 Program bus 3 assign		
206	14		Input 6 Program bus 4 assign		
207	15		Input 6 Program bus 5 assign		
208	16		Input 6 Program bus 6 assign		
209	17		Input 6 Program bus 7 assign		
210	18		Input 6 Program bus 8 assign		
211	19		Input 7 Program bus 1 assign		
212	20		Input 7 Program bus 2 assign		
213	21		Input 7 Program bus 3 assign		
214	22		Input 7 Program bus 4 assign		
215	23		Input 7 Program bus 5 assign		
216	24		Input 7 Program bus 6 assign		
217	25		Input 7 Program bus 7 assign		
218	26		Input 7 Program bus 8 assign		
219	27		Input 8 Program bus 1 assign		
220	28		Input 8 Program bus 2 assign		
221	29		Input 8 Program bus 3 assign		
222	30		Input 8 Program bus 4 assign		
223	31		Input 8 Program bus 5 assign		
224	32		Input 8 Program bus 6 assign		
225	33		Input 8 Program bus 7 assign		
226	34		Input 8 Program bus 8 assign		
227	35		ST Input A Program bus 1 assign		
228	36		ST Input A Program bus 2 assign		
229	37		ST Input A Program bus 3 assign		
230	38		ST Input A Program bus 4 assign		
231	39		ST Input A Program bus 5 assign		
232	40	ST Input A Program bus 6 assign			
233	41	ST Input A Program bus 7 assign			
234	42	ST Input A Program bus 8 assign			
235	43	ST Input B Program bus 1 assign			
236	44	ST Input B Program bus 2 assign			
237	45	ST Input B Program bus 3 assign			
238	46	ST Input B Program bus 4 assign			
239	47	ST Input B Program bus 5 assign			
240	48	ST Input B Program bus 6 assign			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
241	49	2	ST Input B Program bus 7 assign		
242	50		ST Input B Program bus 8 assign		
243	51		ST Input C Program bus 1 assign		
244	52		ST Input C Program bus 2 assign		
245	53		ST Input C Program bus 3 assign		
246	54		ST Input C Program bus 4 assign		
247	55		ST Input C Program bus 5 assign		
248	56		ST Input C Program bus 6 assign		
249	57		ST Input C Program bus 7 assign		
250	58		ST Input C Program bus 8 assign		
251	59		Input 1 aux1 pre/post		
252	60		Input 2 aux1 pre/post		
253	61		Input 3 aux1 pre/post		
254	62		Input 4 aux1 pre/post		
255	63		Input 5 aux1 pre/post		
256	64		Input 6 aux1 pre/post		
257	65		Input 7 aux1 pre/post		
258	66		Input 8 aux1 pre/post		
259	67		Input 1 aux2 pre/post		
260	68		Input 2 aux2 pre/post		
261	69		Input 3 aux2 pre/post		
262	70		Input 4 aux2 pre/post		
263	71		Input 5 aux2 pre/post		
264	72		Input 6 aux2 pre/post		
265	73		Input 7 aux2 pre/post		
266	74		Input 8 aux2 pre/post		
267	75		Input 1 aux3 pre/post		
268	76		Input 2 aux3 pre/post		
269	77		Input 3 aux3 pre/post		
270	78		Input 4 aux3 pre/post		
271	79		Input 5 aux3 pre/post		
272	80		Input 6 aux3 pre/post		
273	81		Input 7 aux3 pre/post		
274	82		Input 8 aux3 pre/post		
275	83		ST Input A aux1 pre/post		
276	84		ST Input B aux1 pre/post		
277	85		ST Input C aux1 pre/post		
278	86		ST Input A aux2 pre/post		
279	87		ST Input B aux2 pre/post		
280	88		ST Input C aux2 pre/post		
281	89		ST Input A aux3 pre/post		
282	90		ST Input B aux3 pre/post		
283	91		ST Input C aux3 pre/post		
284	92		Reserved		
285	93		Reserved		
286	94		Reserved		
287	95		Reserved		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
288	0	3	Reserved		
289	1		Reserved		
290	2		Reserved		
291	3		Reserved		
292	4		Reserved		
293	5		Reserved		
294	6		Reserved		
295	7		Reserved		
296	8		Reserved		
297	9		Reserved		
298	10		Reserved		
299	11		Reserved		
300	12		Reserved		
301	13		Reserved		
302	14		Reserved		
303	15		Reserved		
304	16		Reserved		
305	17		Reserved		
306	18		Reserved		
307	19		Reserved		
308	20		Channel 1 MON TO BUS on/off		
309	21		Channel 2 MON TO BUS on/off		
310	22		Channel 3 MON TO BUS on/off		
311	23		Channel 4 MON TO BUS on/off		
312	24		Channel 5 MON TO BUS on/off		
313	25		Channel 6 MON TO BUS on/off		
314	26		Channel 7 MON TO BUS on/off		
315	27		Channel 8 MON TO BUS on/off		
316	28		Channel 1 BUS TO MON on/off		
317	29		Channel 2 BUS TO MON on/off		
318	30		Channel 3 BUS TO MON on/off		
319	31		Channel 4 BUS TO MON on/off		
320	32		Channel 5 BUS TO MON on/off		
321	23		Channel 6 BUS TO MON on/off		
322	24		Channel 7 BUS TO MON on/off		
323	25		Channel 8 BUS TO MON on/off		
324	26		Input 1 Phase		
325	27		Input 2 Phase		
326	38		Input 3 Phase		
327	39		Input 4 Phase		
328	40		Input 5 Phase		
329	41		Input 6 Phase		
330	42		Input 7 Phase		
331	43		Input 8 Phase		
332	44		Monitor 1 Phase		
333	45		Monitor 2 Phase		
334	46		Monitor 3 Phase		
335	47	Monitor 4 Phase			
336	48	MONITOR 5 PHASE			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
337	49	3	Monitor 6 Phase		
338	50		Monitor 7 Phase		
339	51		Monitor 8 Phase		
340	52		ST Input A Phase		
341	53		ST Input B Phase		
342	54		ST Input C Phase		
343	55		Input 1 High Pass Filter on/off		
344	56		Input 2 High Pass Filter on/off		
345	57		Input 3 High Pass Filter on/off		
346	58		Input 4 High Pass Filter on/off		
347	59		Input 5 High Pass Filter on/off		
348	60		Input 6 High Pass Filter on/off		
349	61		Input 7 High Pass Filter on/off		
350	62		Input 8 High Pass Filter on/off		
351	63		Monitor 1 High Pass Filter on/off		
352	64		Monitor 2 High Pass Filter on/off		
353	65		Monitor 3 High Pass Filter on/off		
354	66		Monitor 4 High Pass Filter on/off		
355	67		Monitor 5 High Pass Filter on/off		
356	68		Monitor 6 High Pass Filter on/off		
357	69		Monitor 7 High Pass Filter on/off		
358	70		Monitor 8 High Pass Filter on/off		
359	71		ST Input A High Pass Filter on/off		
360	72		ST Input B High Pass Filter on/off		
361	73		ST Input C High Pass Filter on/off		
362	74		Input 1 Low Pass Filter on/off		
363	75		Input 2 Low Pass Filter on/off		
364	76		Input 3 Low Pass Filter on/off		
365	77		Input 4 Low Pass Filter on/off		
366	78		Input 5 Low Pass Filter on/off		
367	79		Input 6 Low Pass Filter on/off		
368	80		Input 7 Low Pass Filter on/off		
369	81		Input 8 Low Pass Filter on/off		
370	82		Monitor 1 Low Pass Filter on/off		
371	83		Monitor 2 Low Pass Filter on/off		
372	84		Monitor 3 Low Pass Filter on/off		
373	85		Monitor 4 Low Pass Filter on/off		
374	86		Monitor 5 Low Pass Filter on/off		
375	87	Monitor 6 Low Pass Filter on/off			
376	88	Monitor 7 Low Pass Filter on/off			
377	89	Monitor 8 Low Pass Filter on/off			
378	90	ST Input A Low Pass Filter on/off			
379	91	ST Input B Low Pass Filter on/off			
380	92	ST Input C Low Pass Filter on/off			
381	93	Input 1 High Pass Filter Frequency			
382	94	Input 2 High Pass Filter Frequency			
383	95	Input 3 High Pass Filter Frequency			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
384	0	4	Input 4 High Pass Filter Frequency		
385	1		Input 5 High Pass Filter Frequency		
386	2		Input 6 High Pass Filter Frequency		
387	3		Input 7 High Pass Filter Frequency		
388	4		Input 8 High Pass Filter Frequency		
389	5		Monitor 1 High Pass Filter Frequency		
390	6		Monitor 2 High Pass Filter Frequency		
391	7		Monitor 3 High Pass Filter Frequency		
392	8		Monitor 4 High Pass Filter Frequency		
393	9		Monitor 5 High Pass Filter Frequency		
394	10		Monitor 6 High Pass Filter Frequency		
395	11		Monitor 7 High Pass Filter Frequency		
396	12		Monitor 8 High Pass Filter Frequency		
397	13		ST Input A High Pass Filter Frequency		
398	14		ST Input B High Pass Filter Frequency		
399	15		ST Input C High Pass Filter Frequency		
400	16		Input 1 Low Pass Filter Frequency		
401	17		Input 2 Low Pass Filter Frequency		
402	18		Input 3 Low Pass Filter Frequency		
403	19		Input 4 Low Pass Filter Frequency		
404	20		Input 5 Low Pass Filter Frequency		
405	21		Input 6 Low Pass Filter Frequency		
406	22		Input 7 Low Pass Filter Frequency		
407	23		Input 8 Low Pass Filter Frequency		
408	24		Monitor 1 Low Pass Filter Frequency		
409	25		Monitor 2 Low Pass Filter Frequency		
410	26		Monitor 3 Low Pass Filter Frequency		
411	27		Monitor 4 Low Pass Filter Frequency		
412	28		Monitor 5 Low Pass Filter Frequency		
413	29		Monitor 6 Low Pass Filter Frequency		
414	30		Monitor 7 Low Pass Filter Frequency		
415	31		Monitor 8 Low Pass Filter Frequency		
416	32		ST Input A Low Pass Filter Frequency		
417	33		ST Input B Low Pass Filter Frequency		
418	34		ST Input C Low Pass Filter Frequency		
419	35		Input 1 equalizer on/off		
420	36		Input 2 equalizer on/off		
421	37		Input 3 equalizer on/off		
422	38		Input 4 equalizer on/off		
423	39		Input 5 equalizer on/off		
424	40		Input 6 equalizer on/off		
425	41		Input 7 equalizer on/off		
426	42		Input 8 equalizer on/off		
427	43	Monitor 1 equalizer on/off			
428	44	Monitor 2 equalizer on/off			
429	45	Monitor 3 equalizer on/off			
430	46	Monitor 4 equalizer on/off			
431	47	Monitor 5 equalizer on/off			
432	48	Monitor 6 equalizer on/off			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
433	49	4	Monitor 7 equalizer on/off		
434	50		Monitor 8 equalizer on/off		
435	51		ST Input A equalizer on/off		
436	52		ST Input B equalizer on/off		
437	53		ST Input C equalizer on/off		
438	54		Input 1 Low band equalizer Frequency		
439	55		Input 1 Low band equalizer Gain		
440	56		Input 1 Low band equalizer Q		
441	57		Input 1 Low band equalizer Type		
442	58		Input 1 Low Mid band equalizer Frequency		
443	59		Input 1 Low Mid band equalizer Gain		
444	60		Input 1 Low Mid band equalizer Q		
445	61		Input 1 Low Mid band equalizer Type		
446	62		Input 1 High Mid band equalizer Frequency		
447	63		Input 1 High Mid band equalizer Gain		
448	64		Input 1 High Mid band equalizer Q		
449	65		Input 1 High Mid band equalizer Type		
450	66		Input 1 High band equalizer Frequency		
451	67		Input 1 High band equalizer Gain		
452	68		Input 1 High band equalizer Q		
453	69		Input 1 High band equalizer Type		
454	70		Input 2 Low band equalizer Frequency		
455	71		Input 2 Low band equalizer Gain		
456	72		Input 2 Low band equalizer Q		
457	73		Input 2 Low band equalizer Type		
458	74		Input 2 Low Mid band equalizer Frequency		
459	75		Input 2 Low Mid band equalizer Gain		
460	76		Input 2 Low Mid band equalizer Q		
461	77		Input 2 Low Mid band equalizer Type		
462	78		Input 2 High Mid band equalizer Frequency		
463	79		Input 2 High Mid band equalizer Gain		
464	80		Input 2 High Mid band equalizer Q		
465	81		Input 2 High Mid band equalizer Type		
466	82		Input 2 High band equalizer Frequency		
467	83		Input 2 High band equalizer Gain		
468	84		Input 2 High band equalizer Q		
469	85		Input 2 High band equalizer Type		
470	86		Input 3 Low band equalizer Frequency		
471	87		Input 3 Low band equalizer Gain		
472	88		Input 3 Low band equalizer Q		
473	89		Input 3 Low band equalizer Type		
474	90		Input 3 Low Mid band equalizer Frequency		
475	91		Input 3 Low Mid band equalizer Gain		
476	92		Input 3 Low Mid band equalizer Q		
477	93		Input 3 Low Mid band equalizer Type		
478	94		Input 3 High Mid band equalizer Frequency		
479	95		Input 3 High Mid band equalizer Gain		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
480	0	5	Input 3 High Mid band equalizer Q		
481	1		Input 3 High Mid band equalizer Type		
482	2		Input 3 High band equalizer Frequency		
483	3		Input 3 High band equalizer Gain		
484	4		Input 3 High band equalizer Q		
485	5		Input 3 High band equalizer Type		
486	6		Input 4 Low band equalizer Frequency		
487	7		Input 4 Low band equalizer Gain		
488	8		Input 4 Low band equalizer Q		
489	9		Input 4 Low band equalizer Type		
490	10		Input 4 Low Mid band equalizer Frequency		
491	11		Input 4 Low Mid band equalizer Gain		
492	12		Input 4 Low Mid band equalizer Q		
493	13		Input 4 Low Mid band equalizer Type		
494	14		Input 4 High Mid band equalizer Frequency		
495	15		Input 4 High Mid band equalizer Gain		
496	16		Input 4 High Mid band equalizer Q		
497	17		Input 4 High Mid band equalizer Type		
498	18		Input 4 High band equalizer Frequency		
499	19		Input 4 High band equalizer Gain		
500	20		Input 4 High band equalizer Q		
501	21		Input 4 High band equalizer Type		
502	22		Input 5 Low band equalizer Frequency		
503	23		Input 5 Low band equalizer Gain		
504	24		Input 5 Low band equalizer Q		
505	25		Input 5 Low band equalizer Type		
506	26		Input 5 Low Mid band equalizer Frequency		
507	27		Input 5 Low Mid band equalizer Gain		
508	28		Input 5 Low Mid band equalizer Q		
509	29		Input 5 Low Mid band equalizer Type		
510	30		Input 5 High Mid band equalizer Frequency		
511	31		Input 5 High Mid band equalizer Gain		
512	32		Input 5 High Mid band equalizer Q		
513	33		Input 5 High Mid band equalizer Type		
514	34		Input 5 High band equalizer Frequency		
515	35		Input 5 High band equalizer Gain		
516	36		Input 5 High band equalizer Q		
517	37		Input 5 High band equalizer Type		
518	38		Input 6 Low band equalizer Frequency		
519	39		Input 6 Low band equalizer Gain		
520	40		Input 6 Low band equalizer Q		
521	41		Input 6 Low band equalizer Type		
522	42		Input 6 Low Mid band equalizer Frequency		
523	43		Input 6 Low Mid band equalizer Gain		
524	44		Input 6 Low Mid band equalizer Q		
525	45		Input 6 Low Mid band equalizer Type		
526	46		Input 6 High Mid band equalizer Frequency		
527	47		Input 6 High Mid band equalizer Gain		
528	48		Input 6 High Mid band equalizer Q		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
529	49	5	Input 6 High Mid band equalizer Type		
530	50		Input 6 High band equalizer Frequency		
531	51		Input 6 High band equalizer Gain		
532	52		Input 6 High band equalizer Q		
533	53		Input 6 High band equalizer Type		
534	54		Input 7 Low band equalizer Frequency		
535	55		Input 7 Low band equalizer Gain		
536	56		Input 7 Low band equalizer Q		
537	57		Input 7 Low band equalizer Type		
538	58		Input 7 Low Mid band equalizer Frequency		
539	59		Input 7 Low Mid band equalizer Gain		
540	60		Input 7 Low Mid band equalizer Q		
541	61		Input 7 Low Mid band equalizer Type		
542	62		Input 7 High Mid band equalizer Frequency		
543	63		Input 7 High Mid band equalizer Gain		
544	64		Input 7 High Mid band equalizer Q		
545	65		Input 7 High Mid band equalizer Type		
546	66		Input 7 High band equalizer Frequency		
547	67		Input 7 High band equalizer Gain		
548	68		Input 7 High band equalizer Q		
549	69		Input 7 High band equalizer Type		
550	70		Input 8 Low band equalizer Frequency		
551	71		Input 8 Low band equalizer Gain		
552	72		Input 8 Low band equalizer Q		
553	73		Input 8 Low band equalizer Type		
554	74		Input 8 Low Mid band equalizer Frequency		
555	75		Input 8 Low Mid band equalizer Gain		
556	76		Input 8 Low Mid band equalizer Q		
557	77		Input 8 Low Mid band equalizer Type		
558	78		Input 8 High Mid band equalizer Frequency		
559	79		Input 8 High Mid band equalizer Gain		
560	80		Input 8 High Mid band equalizer Q		
561	81		Input 8 High Mid band equalizer Type		
562	82		Input 8 High band equalizer Frequency		
563	83		Input 8 High band equalizer Gain		
564	84	Input 8 High band equalizer Q			
565	85	Input 8 High band equalizer Type			
566	86	Monitor 1 Low band equalizer Frequency			
567	87	Monitor 1 Low band equalizer Gain			
568	88	Monitor 1 Low band equalizer Q			
569	89	Monitor 1 Low band equalizer Type			
570	90	Monitor 1 Low Mid band equalizer Frequency			
571	91	Monitor 1 Low Mid band equalizer Gain			
572	92	Monitor 1 Low Mid band equalizer Q			
573	93	Monitor 1 Low Mid band equalizer Type			
574	94	Monitor 1 High Mid band equalizer Frequency			
575	95	Monitor 1 High Mid band equalizer Gain			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
576	0	6	Monitor 1 High Mid band equalizer Q		
577	1		Monitor 1 High Mid band equalizer Type		
578	2		Monitor 1 High band equalizer Frequency		
579	3		Monitor 1 High band equalizer Gain		
580	4		Monitor 1 High band equalizer Q		
581	5		Monitor 1 High band equalizer Type		
582	6		Monitor 2 Low band equalizer Frequency		
583	7		Monitor 2 Low band equalizer Gain		
584	8		Monitor 2 Low band equalizer Q		
585	9		Monitor 2 Low band equalizer Type		
586	10		Monitor 2 Low Mid band equalizer Frequency		
587	11		Monitor 2 Low Mid band equalizer Gain		
588	12		Monitor 2 Low Mid band equalizer Q		
589	13		Monitor 2 Low Mid band equalizer Type		
590	14		Monitor 2 High Mid band equalizer Frequency		
591	15		Monitor 2 High Mid band equalizer Gain		
592	16		Monitor 2 High Mid band equalizer Q		
593	17		Monitor 2 High Mid band equalizer Type		
594	18		Monitor 2 High band equalizer Frequency		
595	19		Monitor 2 High band equalizer Gain		
596	20		Monitor 2 High band equalizer Q		
597	21		Monitor 2 High band equalizer Type		
598	22		Monitor 3 Low band equalizer Frequency		
599	23		Monitor 3 Low band equalizer Gain		
600	24		Monitor 3 Low band equalizer Q		
601	25		Monitor 3 Low band equalizer Type		
602	26		Monitor 3 Low Mid band equalizer Frequency		
603	27		Monitor 3 Low Mid band equalizer Gain		
604	28		Monitor 3 Low Mid band equalizer Q		
605	29		Monitor 3 Low Mid band equalizer Type		
606	30		Monitor 3 High Mid band equalizer Frequency		
607	31		Monitor 3 High Mid band equalizer Gain		
608	32		Monitor 3 High Mid band equalizer Q		
609	33		Monitor 3 High Mid band equalizer Type		
610	34		Monitor 3 High band equalizer Frequency		
611	35		Monitor 3 High band equalizer Gain		
612	36		Monitor 3 High band equalizer Q		
613	37		Monitor 3 High band equalizer Type		
614	38		Monitor 4 Low band equalizer Frequency		
615	39		Monitor 4 Low band equalizer Gain		
616	40		Monitor 4 Low band equalizer Q		
617	41		Monitor 4 Low band equalizer Type		
618	42		Monitor 4 Low Mid band equalizer Frequency		
619	43		Monitor 4 Low Mid band equalizer Gain		
620	44		Monitor 4 Low Mid band equalizer Q		
621	45		Monitor 4 Low Mid band equalizer Type		
622	46		Monitor 4 High Mid band equalizer Frequency		
623	47		Monitor 4 High Mid band equalizer Gain		
624	48	Monitor 4 High Mid band equalizer Q			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
625	49	6	Monitor 4 High Mid band equalizer Type		
626	50		Monitor 4 High band equalizer Frequency		
627	51		Monitor 4 High band equalizer Gain		
628	52		Monitor 4 High band equalizer Q		
629	53		Monitor 4 High band equalizer Type		
630	54		Monitor 5 Low band equalizer Frequency		
631	55		Monitor 5 Low band equalizer Gain		
632	56		Monitor 5 Low band equalizer Q		
633	57		Monitor 5 Low band equalizer Type		
634	58		Monitor 5 Low Mid band equalizer Frequency		
635	59		Monitor 5 Low Mid band equalizer Gain		
636	60		Monitor 5 Low Mid band equalizer Q		
637	61		Monitor 5 Low Mid band equalizer Type		
638	62		Monitor 5 High Mid band equalizer Frequency		
639	63		Monitor 5 High Mid band equalizer Gain		
640	64		Monitor 5 High Mid band equalizer Q		
641	65		Monitor 5 High Mid band equalizer Type		
642	66		Monitor 5 High band equalizer Frequency		
643	67		Monitor 5 High band equalizer Gain		
644	68		Monitor 5 High band equalizer Q		
645	69		Monitor 5 High band equalizer Type		
646	70		Monitor 6 Low band equalizer Frequency		
647	71		Monitor 6 Low band equalizer Gain		
648	72		Monitor 6 Low band equalizer Q		
649	73		Monitor 6 Low band equalizer Type		
650	74		Monitor 6 Low Mid band equalizer Frequency		
651	75		Monitor 6 Low Mid band equalizer Gain		
652	76		Monitor 6 Low Mid band equalizer Q		
653	77		Monitor 6 Low Mid band equalizer Type		
654	78		Monitor 6 High Mid band equalizer Frequency		
655	79		Monitor 6 High Mid band equalizer Gain		
656	80		Monitor 6 High Mid band equalizer Q		
657	81		Monitor 6 High Mid band equalizer Type		
658	82		Monitor 6 High band equalizer Frequency		
659	83		Monitor 6 High band equalizer Gain		
660	84		Monitor 6 High band equalizer Q		
661	85		Monitor 6 High band equalizer Type		
662	86		Monitor 7 Low band equalizer Frequency		
663	87		Monitor 7 Low band equalizer Gain		
664	88		Monitor 7 Low band equalizer Q		
665	89		Monitor 7 Low band equalizer Type		
666	90		Monitor 7 Low Mid band equalizer Frequency		
667	91		Monitor 7 Low Mid band equalizer Gain		
668	92		Monitor 7 Low Mid band equalizer Q		
669	93		Monitor 7 Low Mid band equalizer Type		
670	94		Monitor 7 High Mid band equalizer Frequency		
671	95		Monitor 7 High Mid band equalizer Gain		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
672	0	7	Monitor 7 High Mid band equalizer Q		
673	1		Monitor 7 High Mid band equalizer Type		
674	2		Monitor 7 High band equalizer Frequency		
675	3		Monitor 7 High band equalizer Gain		
676	4		Monitor 7 High band equalizer Q		
677	5		Monitor 7 High band equalizer Type		
678	6		Monitor 8 Low band equalizer Frequency		
679	7		Monitor 8 Low band equalizer Gain		
680	8		Monitor 8 Low band equalizer Q		
681	9		Monitor 8 Low band equalizer Type		
682	10		Monitor 8 Low Mid band equalizer Frequency		
683	11		Monitor 8 Low Mid band equalizer Gain		
684	12		Monitor 8 Low Mid band equalizer Q		
685	13		Monitor 8 Low Mid band equalizer Type		
686	14		Monitor 8 High Mid band equalizer Frequency		
687	15		Monitor 8 High Mid band equalizer Gain		
688	16		Monitor 8 High Mid band equalizer Q		
689	17		Monitor 8 High Mid band equalizer Type		
690	18		Monitor 8 High band equalizer Frequency		
691	19		Monitor 8 High band equalizer Gain		
692	20		Monitor 8 High band equalizer Q		
693	21		Monitor 8 High band equalizer Type		
694	22		ST Input A Low band equalizer Frequency		
695	23		ST Input A Low band equalizer Gain		
696	24		ST Input A Low band equalizer Q		
697	25		ST Input A Low band equalizer Type		
698	26		ST Input A Low Mid band equalizer Frequency		
699	27		ST Input A Low Mid band equalizer Gain		
700	28		ST Input A Low Mid band equalizer Q		
701	29		ST Input A Low Mid band equalizer Type		
702	30		ST Input A High Mid band equalizer Frequency		
703	31		ST Input A High Mid band equalizer Gain		
704	32		ST Input A High Mid band equalizer Q		
705	33		ST Input A High Mid band equalizer Type		
706	34		ST Input A High band equalizer Frequency		
707	35		ST Input A High band equalizer Gain		
708	36		ST Input A High band equalizer Q		
709	37		ST Input A High band equalizer Type		
710	38		ST Input B Low band equalizer Frequency		
711	39		ST Input B Low band equalizer Gain		
712	40		ST Input B Low band equalizer Q		
713	41		ST Input B Low band equalizer Type		
714	42		ST Input B Low Mid band equalizer Frequency		
715	43		ST Input B Low Mid band equalizer Gain		
716	44		ST Input B Low Mid band equalizer Q		
717	45		ST Input B Low Mid band equalizer Type		
718	46		ST Input B High Mid band equalizer Frequency		
719	47	ST Input B High Mid band equalizer Gain			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
720	48	7	ST Input B High Mid band equalizer Q		
721	49		ST Input B High Mid band equalizer Type		
722	50		ST Input B High band equalizer Frequency		
723	51		ST Input B High band equalizer Gain		
724	52		ST Input B High band equalizer Q		
725	53		ST Input B High band equalizer Type		
726	54		ST Input C Low band equalizer Frequency		
727	55		St Input C Low band equalizer Gain		
728	56		ST Input C Low band equalizer Q		
729	57		ST Input C Low band equalizer Type		
730	58		ST Input C Low Mid band equalizer Frequency		
731	59		ST Input C Low Mid band equalizer Gain		
732	60		ST Input C Low Mid band equalizer Q		
733	61		ST Input C Low Mid band equalizer Type		
734	62		ST Input C High Mid band equalizer Frequency		
735	63		ST Input C High Mid band equalizer Gain		
736	64		ST Input C High Mid band equalizer Q		
737	65		ST Input C High Mid band equalizer Type		
738	66		ST Input C High band equalizer Frequency		
739	67		ST Input C High band equalizer Gain		
740	68		ST Input C High band equalizer Q		
741	69		ST Input C High band equalizer Type		
742	70		Input 1 Pad		
743	71		Input 2 Pad		
744	72		Input 3 Pad		
745	73		Input 4 Pad		
746	74		Input 5 Pad		
747	75		Input 6 Pad		
748	76		Input 7 Pad		
749	77		Input 8 Pad		
750	78		Monitor 1 Pad		
751	79		Monitor 2 Pad		
752	80		Monitor 3 Pad		
753	81		Monitor 4 Pad		
754	82		Monitor 5 Pad		
755	83		Monitor 6 Pad		
756	84		Monitor 7 Pad		
757	85		Monitor 8 Pad		
758	86		ST Input A Pad		
759	87		ST Input B Pad		
760	88		ST Input C Pad		
761	89		ST Input A Internal/External		
762	90		ST Input B Internal/External		
763	91		Input 1 Fade Time		
764	92		Input 2 Fade Time		
765	93		Input 3 Fade Time		
766	94		Input 4 Fade Time		
767	95		Input 5 Fade Time		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
768	0	8	Input 6 Fade Time		
769	1		Input 7 Fade Time		
770	2		Input 8 Fade Time		
771	3		Monitor 1 Fade Time		
772	4		Monitor 2 Fade Time		
773	5		Monitor 3 Fade Time		
774	6		Monitor 4 Fade Time		
775	7		Monitor 5 Fade Time		
776	8		Monitor 6 Fade Time		
777	9		Monitor 7 Fade Time		
778	10		Monitor 8 Fade Time		
779	11		ST Input A Fade Time		
780	12		ST Input B Fade Time		
781	13		ST Input C Fade Time		
782	14		ST Input A balance		
783	15		ST Input B balance		
784	16		ST Input C balance		
785	17		Channel 1 fader flip		
786	18		Channel 2 fader flip		
787	19		Channel 3 fader flip		
788	20		Channel 4 fader flip		
789	21		Channel 5 fader flip		
790	22		Channel 6 fader flip		
791	23		Channel 7 fader flip		
792	24		Channel 8 fader flip		
793	25		Input 1 SOLO on/off		
794	26		Input 2 SOLO on/off		
795	27		Input 3 SOLO on/off		
796	28		Input 4 SOLO on/off		
797	29		Input 5 SOLO on/off		
798	30		Input 6 SOLO on/off		
799	31		Input 7 SOLO on/off		
800	32		Input 8 SOLO on/off		
801	33		Monitor 1 SOLO on/off		
802	34		Monitor 2 SOLO on/off		
803	35		Monitor 3 SOLO on/off		
804	36		Monitor 4 SOLO on/off		
805	37		Monitor 5 SOLO on/off		
806	38		Monitor 6 SOLO on/off		
807	39		Monitor 7 SOLO on/off		
808	40		Monitor 8 SOLO on/off		
809	41		ST Input A SOLO on/off		
810	42		ST Input B SOLO on/off		
811	43		ST Input C SOLO on/off		
812	44		Input 1 Insert in on/off		
813	45		Input 2 Insert in on/off		
814	46		Input 3 Insert in on/off		
815	47	Input 4 Insert in on/off			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
816	48	8	Input 5 Insert in on/off		
817	49		Input 6 Insert in on/off		
818	50		Input 7 Insert in on/off		
819	51		Input 8 Insert in on/off		
820	52		Monitor 1 Insert in on/off		
821	53		Monitor 2 Insert in on/off		
822	54		Monitor 3 Insert in on/off		
823	55		Monitor 4 Insert in on/off		
824	56		Monitor 5 Insert in on/off		
825	57		Monitor 6 Insert in on/off		
826	58		Monitor 7 Insert in on/off		
827	59		Monitor 8 Insert in on/off		
828	60		ST Input A Insert in on/off		
829	61		ST Input B Insert in on/off		
830	62		ST Input C Insert in on/off		
831	63		Stereo Insert in on/off		
832	64		Input 1 Insert in pre/post		
833	65		Input 2 Insert in pre/post		
834	66		Input 3 Insert in pre/post		
835	67		Input 4 Insert in pre/post		
836	68		Input 5 Insert in pre/post		
837	69		Input 6 Insert in pre/post		
838	70		Input 7 Insert in pre/post		
839	71		Input 8 Insert in pre/post		
840	72		Monitor 1 Insert in pre/post		
841	73		Monitor 2 Insert in pre/post		
842	74		Monitor 3 Insert in pre/post		
843	75		Monitor 4 Insert in pre/post		
844	76		Monitor 5 Insert in pre/post		
845	77		Monitor 6 Insert in pre/post		
846	78		Monitor 7 Insert in pre/post		
847	79		Monitor 8 Insert in pre/post		
848	80		ST Input A Insert in pre/post		
849	81		ST Input B Insert in pre/post		
850	82		ST Input C Insert in pre/post		
851	83		Program bus 1 cascade in Pad		
852	84		Program bus 2 cascade in Pad		
853	85		Program bus 3 cascade in Pad		
854	86		Program bus 4 cascade in Pad		
855	87		Program bus 5 cascade in Pad		
856	88		Program bus 6 cascade in Pad		
857	89		Program bus 7 cascade in Pad		
858	90		Program bus 8 cascade in Pad		
859	91		Aux Send1 bus cascade in Pad		
860	92		Aux Send2 bus cascade in Pad		
861	93		Aux Send3 bus cascade in Pad		
862	94		Stereo bus cascade in Pad		
863	95		SOLO bus cascade in Pad		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
864	0	9	Panpot mode (Nominal/+3dB)		
865	1		Effect 1 Select		
866	2		Effect 2 Select		
867	3		Effect 1 parameter1 (High byte)		
868	4		Effect 1 parameter1 (Low byte)		
869	5		Effect 1 parameter2 (High byte)		
870	6		Effect 1 parameter2 (Low byte)		
871	7		Effect 1 parameter3 (High byte)		
872	8		Effect 1 parameter3 (Low byte)		
873	9		Effect 1 parameter4 (High byte)		
874	10		Effect 1 parameter4 (Low byte)		
875	11		Effect 1 parameter5 (High byte)		
876	12		Effect 1 parameter5 (Low byte)		
877	13		Effect 1 parameter6 (High byte)		
878	14		Effect 1 parameter6 (Low byte)		
879	15		Effect 1 parameter7 (High byte)		
880	16		Effect 1 parameter7 (Low byte)		
881	17		Effect 1 parameter8 (High byte)		
882	18		Effect 1 parameter8 (Low byte)		
883	19		Effect 1 parameter9 (High byte)		
884	20		Effect 1 parameter9 (Low byte)		
885	21		Effect 1 parameter10 (High byte)		
886	22		Effect 1 parameter10 (Low byte)		
887	23		Effect 2 parameter1 (High byte)		
888	24		Effect 2 parameter1 (Low byte)		
889	25		Effect 2 parameter2 (High byte)		
890	26		Effect 2 parameter2 (Low byte)		
891	27		Effect 2 parameter3 (High byte)		
892	28		Effect 2 parameter3 (Low byte)		
893	29		Effect 2 parameter4 (High byte)		
894	30		Effect 2 parameter4 (Low byte)		
895	31	Effect 2 parameter5 (High byte)			
896	32	Effect 2 parameter5 (Low byte)			
897	33	Effect 2 parameter6 (High byte)			
898	34	Effect 2 parameter6 (Low byte)			
899	35	Effect 2 parameter7 (High byte)			
900	36	Effect 2 parameter7 (Low byte)			
901	37	Effect 2 parameter8 (High byte)			
902	38	Effect 2 parameter8 (Low byte)			
903	39	Effect 2 parameter9 (High byte)			
904	40	Effect 2 parameter9 (Low byte)			
905	41	Effect 2 parameter10 (High byte)			
906	42	Effect 2 parameter10 (Low byte)			
907	43	Input 1 delay time (High byte)			
908	44	Input 1 delay time (Low byte)			
909	45	Input 2 delay time (High byte)			
910	46	Input 2 delay time (Low byte)			
911	47	Input 3 delay time (High byte)			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
912	48	9	Input 3 delay time (Low byte)		
913	49		Input 4 delay time (High byte)		
914	50		Input 4 delay time (Low byte)		
915	51		Input 5 delay time (High byte)		
916	52		Input 5 delay time (Low byte)		
917	53		Input 6 delay time (High byte)		
918	54		Input 6 delay time (Low byte)		
919	55		Input 7 delay time (High byte)		
920	56		Input 7 delay time (Low byte)		
921	57		Input 8 delay time (High byte)		
922	58		Input 8 delay time (Low byte)		
923	59		Monitor 1 delay time (High byte)		
924	60		Monitor 1 delay time (Low byte)		
925	61		Monitor 2 delay time (High byte)		
926	62		Monitor 2 delay time (Low byte)		
927	63		Monitor 3 delay time (High byte)		
928	64		Monitor 3 delay time (Low byte)		
929	65		Monitor 4 delay time (High byte)		
930	66		Monitor 4 delay time (Low byte)		
931	67		Monitor 5 delay time (High byte)		
932	68		Monitor 5 delay time (Low byte)		
933	69		Monitor 6 delay time (High byte)		
934	70		Monitor 6 delay time (Low byte)		
935	71		Monitor 7 delay time (High byte)		
936	72		Monitor 7 delay time (Low byte)		
937	73		Monitor 8 delay time (High byte)		
938	74		Monitor 8 delay time (Low byte)		
939	75		ST Input A delay time (High byte)		
940	76		ST Input A delay time (Low byte)		
941	77		ST Input B delay time (High byte)		
942	78		ST Input B delay time (Low byte)		
943	79		ST Input C delay time (High byte)		
944	80		ST Input C delay time (Low byte)		
945	81		Input 1 delay feed back gain (High byte)		
946	82		Input 1 delay feed back gain (Low byte)		
947	83		Input 2 delay feed back gain (High byte)		
948	84		Input 2 delay feed back gain (Low byte)		
949	85		Input 3 delay feed back gain (High byte)		
950	86		Input 3 delay feed back gain (Low byte)		
951	87		Input 4 delay feed back gain (High byte)		
952	88		Input 4 delay feed back gain (Low byte)		
953	89		Input 5 delay feed back gain (High byte)		
954	90		Input 5 delay feed back gain (Low byte)		
955	91		Input 6 delay feed back gain (High byte)		
956	92		Input 6 delay feed back gain (Low byte)		
957	93		Input 7 delay feed back gain (High byte)		
958	94		Input 7 delay feed back gain (Low byte)		
959	95		Input 8 delay feed back gain (High byte)		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
960	0	10	Input 8 delay feed back gain (Low byte)		
961	1		Monitor 1 delay feed back gain (High byte)		
962	2		Monitor 1 delay feed back gain (Low byte)		
963	3		Monitor 2 delay feed back gain (High byte)		
964	4		Monitor 2 delay feed back gain (Low byte)		
965	5		Monitor 3 delay feed back gain (High byte)		
967	6		Monitor 3 delay feed back gain (Low byte)		
967	7		Monitor 4 delay feed back gain (High byte)		
968	8		Monitor 4 delay feed back gain (Low byte)		
969	9		Monitor 5 delay feed back gain (High byte)		
970	10		Monitor 5 delay feed back gain (Low byte)		
971	11		Monitor 6 delay feed back gain (High byte)		
972	12		Monitor 6 delay feed back gain (Low byte)		
973	13		Monitor 7 delay feed back gain (High byte)		
974	14		Monitor 7 delay feed back gain (Low byte)		
975	15		Monitor 8 delay feed back gain (High byte)		
976	16		Monitor 8 delay feed back gain (Low byte)		
977	17		ST Input A delay feed back gain (High byte)		
978	18		ST Input A delay feed back gain (Low byte)		
979	19		ST Input B delay feed back gain (High byte)		
980	20		ST Input B delay feed back gain (Low byte)		
981	21		ST Input C delay feed back gain (High byte)		
982	22		ST Input C delay feed back gain (Low byte)		
983	23		Monitor master stereo/mono		
984	24		Monitor master input select		
985	25		SOLO AFL level		
986	26		Monitor master dim on/off		
987	27		Monitor master dim level		
988	28		SOLO all channel disable		
989	29		Meter HOLD on/off		
990	30		Monitor 1 aux3 pan		
991	31		Monitor 2 aux3 pan		
992	32		Monitor 3 aux3 pan		
993	33		Monitor 4 aux3 pan		
994	34		Monitor 5 aux3 pan		
995	35		Monitor 6 aux3 pan		
996	36		Monitor 7 aux3 pan		
997	37		Monitor 8 aux3 pan		
998	38		Monitor 1 aux1 level		
999	39		Monitor 1 aux2 level		
1000	40		Monitor 1 aux3 level		
1001	41		Monitor 2 aux1 level		
1002	42		Monitor 2 aux2 level		
1003	43		Monitor 2 aux3 level		
1004	44		Monitor 3 aux1 level		
1005	45		Monitor 3 aux2 level		
1006	46		Monitor 3 aux3 level		
1007	47	Monitor 4 aux1 level			

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
1008	48	10	Monitor 4 aux2 level		
1009	49		Monitor 4 aux3 level		
1010	50		Monitor 5 aux1 level		
1011	51		Monitor 5 aux2 level		
1012	52		Monitor 5 aux3 level		
1013	53		Monitor 6 aux1 level		
1014	54		Monitor 6 aux2 level		
1015	55		Monitor 6 aux3 level		
1016	56		Monitor 7 aux1 level		
1017	57		Monitor 7 aux2 level		
1018	58		Monitor 7 aux3 level		
1019	59		Monitor 8 aux1 level		
1020	60		Monitor 8 aux2 level		
1021	61		Monitor 8 aux3 level		
1022	62		Monitor 1 aux1 on/off		
1023	63		Monitor 2 aux1 on/off		
1024	64		Monitor 3 aux1 on/off		
1025	65		Monitor 4 aux1 on/off		
1026	66		Monitor 5 aux1 on/off		
1027	67		Monitor 6 aux1 on/off		
1028	68		Monitor 7 aux1 on/off		
1029	69		Monitor 8 aux1 on/off		
1030	70		Monitor 1 aux2 on/off		
1031	71		Monitor 2 aux2 on/off		
1032	72		Monitor 3 aux2 on/off		
1033	73		Monitor 4 aux2 on/off		
1034	74		Monitor 5 aux2 on/off		
1035	75		Monitor 6 aux2 on/off		
1036	76		Monitor 7 aux2 on/off		
1037	77		Monitor 8 aux2 on/off		
1038	78		Monitor 1 aux3 on/off		
1039	79		Monitor 2 aux3 on/off		
1040	80		Monitor 3 aux3 on/off		
1041	81		Monitor 4 aux3 on/off		
1042	82		Monitor 5 aux3 on/off		
1043	83		Monitor 6 aux3 on/off		
1044	84		Monitor 7 aux3 on/off		
1045	85		Monitor 8 aux3 on/off		
1046	86		Monitor 1 aux1 pre/post		
1047	87		Monitor 2 aux1 pre/post		
1048	88		Monitor 3 aux1 pre/post		
1049	89		Monitor 4 aux1 pre/post		
1050	90		Monitor 5 aux1 pre/post		
1051	91		Monitor 6 aux1 pre/post		
1052	92		Monitor 7 aux1 pre/post		
1053	93		Monitor 8 aux1 pre/post		
1054	94		Monitor 1 aux2 pre/post		
1055	95		Monitor 2 aux2 pre/post		

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
1056	0	11	Monitor 3 aux 2 pre/post		
1057	1		Monitor 4 aux2 pre/post		
1058	2		Monitor 5 aux2 pre/post		
1059	3		Monitor 6 aux2 pre/post		
1060	4		Monitor 7 aux2 pre/post		
1061	5		Monitor 8 aux2 pre/post		
1062	6		Monitor 1 aux3 pre/post		
1063	7		Monitor 2 aux3 pre/post		
1064	8		Monitor 3 aux3 pre/post		
1065	9		Monitor 4 aux3 pre/post		
1066	10		Monitor 5 aux3 pre/post		
1067	11		Monitor 6 aux3 pre/post		
1068	12		Monitor 7 aux3 pre/post		
1069	13		Monitor 8 aux3 pre/post		
1070	14				
1071	15				
1072	16				
1073	17				
1074	18				
1075	19				
1076	20				
1077	21				
1078	22				
1079	23				
1080	24				
1081	25				
1082	26				
1083	27				
1084	28				
1085	29				
1086	30				
1087	31				
1088	32				
1089	33				
1090	34				
1091	35				
1092	36				
1093	37				
1094	38				
1095	39				
1096	40				
1097	41				
1098	42				
1099	43				
1100	44				
1101	45				
1102	46				
1103	47				

Parameter No.	Initial Setup		DMC1000 Parameter	User Setup	
	Controller No.	Bank		Controller No.	Bank
1104	48	11			
1105	49				
1106	50				
1107	51				
1108	52				
1109	53				
1110	54				
1111	55				
1112	56				
1113	57				
1114	58				
1115	59				
1116	60				
1117	61				
1118	62				
1119	63				
1120	64				
1121	65				
1122	66				
1123	67				
1124	68				
1125	69				
1126	70				
1127	71				
1128	72				
1129	73				
1130	74				
1131	75				
1132	76				
1133	77				
1134	78				
1135	79				
1136	80				
1137	81				
1138	82				
1139	83				
1140	84				
1141	85				
1142	86				
1143	87				
1144	88				
1145	89				
1146	90				
1147	91				
1148	92				
1149	93				
1150	94				
1151	95				

Function ...	Transmitted	Recognized	Remarks
Basic Default	: 1 - 16	: 1 - 16	: memorized
Channel Changed	: 1 - 16	: 1 - 16	:
Mode Default	: x	: OMNIOff/OMNIOn	: memorized
Mode Messages	: x	: x	:
Mode Altered	: *****	: x	:
Note	: x	: x	:
Number : True voice	: *****	: x	:
Velocity Note ON	: x	: x	:
Velocity Note OFF	: x	: x	:
After Key's	: x	: x	:
Touch Ch's	: x	: x	:
Pitch Bender	: x	: x	:
0 - 96	: o	: o	: *1
Control	:	:	:
Change	:	:	:
Prog	: o 0 - 127	: o 0 - 127	: *2
Change : True #	: *****	: 0 - 64	:
System Exclusive	: o	: o	: Bulk dump
System : Song Pos	: x	: o	:
System : Song Sel	: x	: x	:
Common : Tune	: x	: x	:
System : Clock	: x	: o	:
Real Time : Commands	: x	: o	:
Aux : Local ON/OFF	: x	: x	:
Aux : All Notes OFF	: x	: x	:
Mes- : Active Sense	: o	: o	:
sages:Reset	: x	: x	:
Notes:			
*1 Each parameter can be assigned to any Control Change and these assignment tables can be stored in memory.			
*2 For program 1-128, memory #0-#64 is selected.			
Mode 1	: OMNI ON, POLY	Mode 2	: OMNI ON, MONO
Mode 3	: OMNI OFF, POLY	Mode 4	: OMNI OFF, MONO
		o	: Yes
		x	: No

Index

A

AES Rx, fonction écran 131
 AES stat, fonction écran 132
 AES Tx, fonction écran 131
 Affichage
 mémoire de scènes 100
 AFL, commande de niveau 67
 Annuler
 dernier enregistrement 117
 Appendice A 169
 Appendice B 188
 Applications 2
 At.MemEd
 fonction écran 111
 At.MemEd, fonction écran 117, 123
 AtCntEd, fonction écran 124
 Auto Clock Display 19
 Auto Effect Screen 83
 AutoCopy, fonction écran 123, 126
 AutoEQScreen 37
 Automation
 activation/désactivation des
 moteurs 118
 annuler le dernier enregistrement
 117
 annuler un enregistrement 116
 arrêter un enregistrement 117
 chargement d'une disquette 98
 chargement de données 127
 code de temps 110
 contrôleurs MIDI 127
 début d'enregistrement 116
 données enregistrées 114
 édition de données hors-ligne 124
 édition de pistes 125
 édition en-ligne 119
 enfonceur/relâche 123
 enregistrement au vol 117
 étapes 115
 fonction écran 109
 fonction écran Fader Edit 120
 horloge MIDI 110
 mode Absolu 119
 mode ALL Trk 119
 mode d'attente d'enregistrement
 115
 mode d'Insertion 120
 mode d'Insertion & données de
 coupure 122
 mode de mise à jour absolue 119
 mode de Remplacement 120
 mode Full 118
 mode Quick 118
 mode REC Trk 119
 mode Relatif 119

modes de localisation 118
 première mémoire de scènes 112
 procédé d'enregistrement 109
 qu'est-ce que c'est? 108
 réglage des pistes 113
 restitution 118
 RETURN/NO RET 120
 sauvegarde de données 127
 sélection de la piste
 d'enregistrement 115
 synchronisation 109
 temps de prise en charge 120
 Time Code, fonction écran 110
 touche AUTO 108
 AUX SEND LEVEL, commandes 71
 Aux, fonction écran 44
 Avertissements i

B

Balance
 canal stéréo 58
 C-R monitor 69
 sortie stéréo 64
 Banque de mesures I 79
 Banque de mesures II 79
 Banque de mesures III 79
 Banques de Mesures 78
 Bits utilisateur
 formats AES/EBU & CD/DAT
 133
 que sont-ils? 133
 BitShift, fonction écran 134
 Boot, fonction écran 136
 Bulk dump, voir vidage de blocs de
 données
 Bulk, fonction écran 143

C

Câbles
 AES/EBU 27
 CD/DAT 27
 DDK (croisés) 26
 horloge de mot 27
 JAE (droits) 26
 MIDI/MTC 27
 SDIF2 27
 Yamaha DIN à 8 broches (YDC)
 26
 Canal
 sélection 20
 Canal AES/EBU
 statut du format (Hex) 131
 Canal d'entrée 34
 canaux 7 & 8 74
 compteurs 45
 connexions d'entrée 34
 delay (retard) 40

envois auxiliaires 44
 fader 43
 HPF 36
 insertion 39
 LFP 36
 pad 36
 paires stéréo 45
 pan 42
 panoramique Aux 3 44
 phase 41
 régler le format d'entrée 34
 retard (delay) 40
 routing 42
 sortie directe 35
 touche EQ de dérivation 36
 touche ON 42
 touche SOLO 43
 Canal de surveillance 47
 commande de niveau LEVEL 51
 compteurs 53
 connexions d'entrée 47
 delay (retard) 40
 envois auxiliaires 52
 fader 51
 HPF 49
 insertion 39
 LPF 49
 pad 49
 paires stéréo 53
 pan 50
 panoramique d'envois Aux 3 52
 phase 41
 régler le format d'entrée 47
 retard (delay) 40
 routing 50
 sortie directe 48
 touche EQ de dérivation 49
 touche ON d'étouffement 50
 touche SOLO 51
 Canal stéréo 54
 balance 58
 compteurs 59
 connexions d'entrée 54
 delay (retard) 40
 envois auxiliaires 59
 fader 58
 HPF 56
 insertion 39
 LPF 56
 pad 56
 panoramique 57
 phase 41
 retard (delay) 40
 routing 57
 sélection d'entrée 54
 sortie directe 55
 touche EQ de dérivation 56
 touche ON d'étouffement 57
 touche SOLO 58

- Canaux de sécurité
Solo 68
- Caractéristiques 1
- Cas.Iso, fonction écran 147
- Cascade
augmenter le nombre de canaux 146
fonction écran Cas.Iso. 147
isolement des bus 147
mémoires de scènes 148
MIDI 148
pads des bus 147
régler le retard 146
solo 148
vidage de données 149
- Casque d'écoute, voir Phones
- Ch Link, fonction écran 93
- Changement de programme
fonction écran Program 141
mémoires de scènes 141
tableau d'assignments 211
vidage de blocs de données 144
- Changements de bits
fonction écran BitShift 134
sorties numériques 133
une nécessité 134
- Charger
données d'automatation 127
données sur disquettes 98
logiciel du système 136
- Chorus (effet) 86
- Code de temps
automatation 110
avertissement de dépassement de limites 111
fonction écran Time Code 110
source 110
temps de commencement 110
type de cadre (frame) 110
- Commande de niveau
AFL 67
AUX SEND LEVEL 71
CUE LEVEL 70
DIM LEVEL 68
LARGE LEVEL 69
LEVEL 51
PHONES LEVEL 69
SMALL LEVEL 69
STUDIO MONITOR LEVEL 70
- Commandes EQUALIZER 37
- Commencer 19
- Commuter (swap)
données de deux pistes 125
mémoires de scènes 102
- Compatibilité
disquettes 97
- Compressor (effet) 90
- Compteurs
banque de mesures I 79
banque de mesures II 79
banque de mesures III 79
canal d'entrée 45
canal de surveillance 53
canal stéréo 59
C-R monitor 69
envois auxiliaires 72
L STEREO R 78
maintenance en pointe 80
moniteurs Studio/Cue 70
régler le temps de chute 80
régler le temps de pointe 80
sortie bus 60
sortie stéréo 64
- Connexion des câbles
remarques 26
- Console
illustration 4
- Contacts des connecteurs ii
- Contraste de l'écran 16
- Control, fonction écran 142
- Contrôleurs
assignation 142
fonction écran Control 142
mode Channel 142
mode Register 142
tableau des assignations 212
vidage de blocs de données 144
- Contrôleurs d'édition vidéo 150
- Convertisseurs A/N
calibrage offset 138
- Copie des données de pistes 126
- Copyright ii
- C-R monitor
balance 69
commande de niveau AFL 67
commande DIM LEVEL 68
commande LARGE LEVEL 69
commande SMALL LEVEL 69
compteurs 69
sorties 66
touche CUE 66
touche DIM ON 68
touche EXT 66
touche MONO 67
touche SMALL 69
touche ST 67
- CUE LEVEL, commande 70
- CUE Sel, fonction écran 66
- CUE, touche 66
- D**
- Delay (retard) 40
- Delay L/R (effet) 88
- DelayMon, fonction écran 41
- Démarrer 19
- DIM LEVEL, commande 68
- DIM ON, touche 68
- Dimensions 199
- DIO, Sel
entrée 2-TR & entrées 7 & 8 74
fonction écran 54
- Disquette
chargement de données 98
chargement de données d'automatation 98
compatibilité 97
effacement de fichiers 99
fonction écran Disk 96
formatage 97
liste de tous les fichiers 98
manipulation 96
opérations 96
que peut-on sauvegarder? 33
sauvegarder des données 97
taquet de protection 96
types de fichiers 96
- DMC1000
aperçu général 4
applications 2
caractéristiques 1
éléments livrés iii
introduction 1
qu'est-ce? 1
réglages initiaux 27
terminologie 2
- DMC1000/Enregistreur à disque dur 162
- DMC1000/Enregistreur Mitsubishi multipistes 166
- DMC1000/Sony multipistes 163
- Données d'automatation
que sont-elles? 32
- Données d'installation
que sont-elles? 32
tableaux de données 190
vidage de blocs de données 144
- Données de coupure
édition 122
- DSP Reset
ré-initialiser le processeur de signaux numériques 139
- Ducking d'envois Aux 45, 53
- E**
- Early ref 1 (effet) 87
- Early ref 2 (effet) 87
- Echo, MIDI 140
- Ecran
réglage du contraste 16
- Edition en-ligne 119
- Edition hors-ligne 124
- Edition vidéo 150
- EditSw, fonction écran 122
- Effacer (clear)
piste 126

- toutes les pistes 111
- Effacer des fichiers
 - disquettes 99
- Effet 1, fonction écran 83
- Effet 2, fonction écran 83
- Effets 81
 - Chorus 86
 - Compressor 90
 - Delay L/R 88
 - Early ref 1 87
 - Early ref 2 87
 - Exciter 89
 - Flange 86
 - Gate reverb 88
 - Panpot 90
 - Phasing 86
 - Pitch change 1 89
 - Pitch change 2 89
 - Rev 1 hall A 85
 - Rev 1 hall B 85
 - Rev 2 room 85
 - Rev 3 vocal 85
 - Rev 4 plate 85
 - Reverse gate 88
 - Stereo echo 88
 - Symphonic 86
- Effets externes 81
 - utilisation 84
- Effets internes 81
 - liste 81
 - paramètres 85–90
 - utilisation 83
- Éléments livrés avec le DMC1000 iii
- Emp.mon, fonction écran 129
- Emphase
 - fonction écran Emp.mon 129
 - fonction écran Emphasis 129
 - format DIN Yamaha à 8 broches 130
 - format M 130
 - moniteur d'entrée 129
 - qu'est-ce? 131
 - sortie 129
- Emphasis, fonction écran 129
- Enfocement/relâche
 - automation 123
- Entrées du moniteur 2TR 73
 - canaux d'entrée 7 & 8 74
 - surveillance 73
- Entrées numériques
 - spécifications techniques 194
- Entrées/sorties analogiques
 - spécifications techniques 193
- Envois auxiliaires
 - canal d'entrée 44
 - canal de surveillance 52
 - canal stéréo 59
 - ducking 45, 53
- Envois maîtres auxiliaires 71
- commande AUX SEND LEVEL
 - 71
- compteurs 72
- sorties 71
- surveillance 72
- touches AUX SEND ON 71
- EQ 36
 - EQ.graph, fonction écran 38
 - Equaliz., fonction écran 37
- EQUALIZER, commandes 37
 - de GAIN 37
 - f 37
 - Q 37
 - touche HIGH 37
 - touche LOW 37
 - touche MON 37
 - touche RESET 37
- Équipements Yamaha supplémentaires 185
- ESAM II
 - liste des commandes 150
- ESAM II, mode source 150
- Exciter (effet) 89
- Exemples de systèmes
 - 8 pistes DMC1000/DRU8 153
 - DAT, appareil principal 158
 - DMC1000 à 24 pistes 155
 - enregistreur à disque dur 162
 - enregistreur analogique à 2 pistes,
 - appareil principal 159
 - enregistreur numérique à 2 pistes,
 - appareil principal 159
 - Mitsubishi multipistes 166
 - Sony Multitrack 163
 - système Audio/Vidéo 1 160
 - système Audio/Vidéo 2 161
 - YPDR601, appareil principal 159
- EXT Mon, fonction écran 73
- EXT, touche 66
- Extraction
 - pistes 125
- F**
- f, EQ
 - commandes 37
- Fade Time, fonction écran 107
- Fader
 - activation/désactivation 118
 - calibrage 138
 - canal d'entrée 43
 - canal de surveillance 51
 - canal stéréo 58
 - fonction écran Fader Edit 120
 - groupement 91
 - hors limites 121
 - mode Absolu 119
 - mode Edit 120
 - mode Relatif 119
- sensibilité au toucher 21
- sortie Bus 61
- sortie stéréo 64
- Fader Edit, fonction écran 43
- Flange (effet) 86
- Fonction écran
 - AES Rx 131
 - AES stat 132
 - AES Tx 131
 - At.MemEd 111, 117, 123
 - AtcntEd 124
 - AutoCopy 123, 126
 - automation 109
 - Aux 44
 - balance 58
 - BitShift 134
 - Boot 136
 - Bulk 143
 - Cas.Iso. 147
 - Ch Link 93
 - Clock 19
 - Control 142
 - CUE Sel 66
 - Delay (retard) 40
 - DelayMon 41
 - DIO Sel., sélection d'entrée canal stéréo 54
 - DIO. Sel. 74
 - Disk 96
 - EditSw 122
 - Effet 1 83
 - Effet 2 83
 - Emp.mon 129
 - Emphasis 129
 - EQ.graph 38
 - Equaliz. 37
 - EXT Mon 73
 - Fader Edit 43, 120
 - FadeTime 107
 - Function 22
 - Grouping 91
 - horloge 19
 - I. Format 34, 47
 - Input 43
 - Ins. On 39
 - Ins.Pre 40
 - M Emph 130
 - Master 61
 - Master, sortie stéréo 64
 - Meter 78
 - MIDI 140
 - O.Format 35, 60
 - OSC 77
 - Pad 36
 - Panpot 42
 - personnalisation 22
 - Phase 41
 - Program 141
 - RAM Card 101

REC Prm 113
 Routing (AFL) 43
 Routing, sortie directe 35, 48
 S/R Prm 105
 SOLO 68
 ST Pair 45
 Sys.Gen 136
 SYS.Init 136
 talkback 76
 Time Code 110
 TimeDate 19
 Title.Ed 104
 Trk.Edit 111, 125
 UserBit 133
 utilisation 22
 WCLK Sel 28
 Fonctions écran
 réglage des paramètres 23
 sélection des paramètres 23
 survol 21
 Format AES/EBU
 bits utilisateur 133
 statut du canal 131
 statut du canal d'entrée (ASCII)
 132
 statut du canal d'entrée (Hex) 131
 Format CD/DAT
 bits utilisateur 133
 interdiction de copie 63
 statut de canal 131
 statut du canal d'entrée (ASCII)
 132
 statut du canal d'entrée (Hex) 131
 Format d'entrée
 canal d'entrée 34
 canal de surveillance 47
 Format d'entrée moniteur 2-pistes
 entrées 73
 Format de sortie
 C-R Monitor 66
 sortie bus 60
 Format M
 diagramme 184
 sommaire 181
 Format M, fonction écran M Emph 130
 Format Yamaha Y1
 diagramme 183
 sommaire 181
 Format Yamaha Y2
 diagramme 183
 emphase DIN à 8 broches 130
 sommaire 181
 Formater
 disquettes 97
 Formats audio numériques 183
 Fréquence d'échantillonnage, voir
 Horloge de mot
 Fusionner (merge)
 deux pistes 125

G

GAIN, EQ
 commandes 37
 Gate reverb (effet) 88
 Glossaire 180
 Groupement
 faders 91
 Grouping, fonction écran 91
 Guide de dépannage 169

H

Horloge de mot
 câbles 27
 qu'est-ce? 27
 réglage de la source 28
 sources disponibles 30
 WCLK Sel, écran 28
 Horloge MIDI
 automatisation 110
 Horloge temps réel
 écran 19
 minuteur 20
 mise à l'heure 19
 HPF
 canal d'entrée 36
 canal de surveillance 49
 canal stéréo 56

I

I.Format
 canal d'entrée 34
 canal de surveillance 47
 moniteur 2-TR 73
 Informations de sécurité i
 Input, fonction écran 43
 Ins. On, fonction écran 39
 Ins.Pre, fonction écran 40
 Insertion
 canaux d'entrée, de surveillance et
 stéréo 39
 sortie stéréo 63
 Installation ii
 Intercommunication
 assignation du bus 76
 modes 75
 Interrupteur d'alimentation 19
 Introduction 1
 Isolement des bus
 cascade 147

L

L STEREO R
 compteurs 78
 LARGE LEVEL, commande 69
 Large Monitors, voir C-R
 LEVEL, commande de niveau 51

Liaison

Ch Link 93
 sauvegarde de réglages 95
 sélection des paramètres 93
 touches CH SELECT 94

Liste

commandes ESAM II 150
 des fichiers d'une disquette 98
 effets internes 81

Logiciel

chargement 136
 copie de sauvegarde 136
 explications 33
 Project Manager 187
 ré-initialisation 137

LPF

canal d'entrée 36
 canal de surveillance 49
 canal stéréo 56

M

M Emph., fonction écran 130
 M, voir Format M
 Maintenance en pointe (Peak Hold)
 touche HOLD 80
 Manuel
 remarques 2
 Marques déposées iii
 Master
 AUX SEND LEVEL 71
 fader stéréo 64
 faders bus 61
 Mémoires de scènes
 affichage de numéros 100
 assignation de titre 104
 assigner un changement de
 programme 141
 carte RAM, mémoire interne 100
 cascade 148
 charger d'une carte RAM 102
 commuter mémoires d'une carte
 RAM 102
 confirmation de rappel 103
 confirmation de sauvegarde 103
 enregistrement au vol 117
 fonction écran At.MemEd 123
 interdiction de stockage de titre
 104
 mémoire de scènes 0 100
 mode Général 105
 mode Scène 105
 première d'un mixage
 d'automations 112
 protection des scènes internes 102
 que sont-elles? 100
 rappel 103
 sauvegarde 102
 sauvegarde et rappel 105

- tableaux de données 188
temps d'estompement 107
- Mémoires de scènes internes 32, 100
- Meter, fonction écran 78
- MIDI
assignation de contrôleurs 142
assigner mémoire de scènes à
 changement de
 programme 141
cascade 148
changements de programmes 141
contrôleurs 142
contrôleurs & automation 127
diagramme d'envoi 201
diagramme de réception 200
Echo 140
envoi et réception de données 140
fonction écran 140
format de données 200
installation de base 140
MIDI Remote 110
mode Channel 142
mode Register 142
Omni 140
PLAY Repeat 109
tableau d'assignations de
 changements de
 programmes 211
tableau d'assignations de
 contrôleurs 212
tableau d'implémentation 236
vidage de blocs de données 33,
 143
- Minuteur 20
- Mise en forme du bruit (Noise Shaping)
 65
- Mise sous/hors tension 19
- Mix scene, voir mémoires de scènes
- Mode Absolu 119
- Mode AFL 67
- Mode ALL Trk 119
- Mode d'attente d'enregistrement 115
- Mode d'Insertion
 automation 120
- Mode de localisation Full 118
- Mode de localisation Quick 118
- Mode de mise à jour absolue 119
- Mode de Remplacement 120
- Mode Général
 mémoires de scènes 105
- Mode Mix 31
- Mode Rec 31
- Mode REC Trk 119
- Mode Relatif 119
- Mode Scène
 mémoires de scènes 105
- Mode source ESAM II 150
- Modes EQ
 d'énergie constante 39
- Q constant 39
- Moniteur Cue
 commande CUE LEVEL 70
 touche ON 70
- Moniteur Studio
 commande STUDIO MONITOR
 LEVEL 70
 touche STUDIO MONITOR ON
 70
- Moniteurs Studio et Cue 70
 compteurs 70
 connexions de sortie 70
 touche CUE MON 70
- MONO, touche 67
- Moteurs
 activation/désactivation 118
- N**
- Nettoyage du DMC1000 ii
- Noise Shaping 65
- O**
- O.Format
 sortie bus 60
 sortie directe du canal d'entrée 35
 sortie directe du canal stéréo 55
- Omni, MIDI 140
- Organisation des données 32
- OSC, fonction écran 77
- Oscillateur 77
- Ouvrages de référence 182
- P**
- Pad
 canal d'entrée 36
 canal de surveillance 49
 canal stéréo 56
- Pads de bus
 cascade 147
- Paires stéréo
 canaux d'entrée 45
 canaux de surveillance 53
 sortie Bus 61
- Pan
 canal d'entrée 42
 canal de surveillance 50
 canal stéréo 57
- Panneau arrière
 illustration 15
- Panoramique d'envois Aux 3
 canal d'entrée 44
 canal de surveillance 52
- Panpot (effet) 90
- Panpot, fonction écran
 canal d'entrée 42
 canal de surveillance 50
- canal stéréo 57
- envois Aux 3, canal d'entrée 44
- envois Aux 3, canal de
 surveillance 52
- Paramètre
 Auto Fader Edit Screen 121
 Auto Punch IN/OUT 123
 Auto.PLAY MIDI OUT 127
 Bus Stereo Link 61
 Internal Mem. Protect 102
 Mem Recall Confirmation 103
 Mem Store Confirmation 103
 MIDI IN Auto.REC 127
 Omni 140
 Parameter Memory 95
 PLAY Repeat 109
 RETURN/NO RET 120
 SetupMem Change BULK Out
 145
 Store Req. IN Prohibit 148
 Store Req. OUT Prohibit 148
 TC Drop Warning Prohibit 111
 Title Store Prohibit 104
- Paramètres
 effets internes 85-90
 fonctions écran, régler 23
- Paramètres d'effets
 Chorus 86
 Compressor 90
 Delay L/R 88
 Early ref 1 87
 Early ref 2 87
 Exciter 89
 Flange 86
 Gate reverb 88
 Panpot 90
 Phasing 86
 Pitch change 1 89
 Pitch change 2 89
 Rev 1 hall A 85
 Rev 1 hall B 85
 Rev 2 room 85
 Rev 3 vocal 85
 Rev 4 plate 85
 Reverse gate 88
 Stereo echo 88
 Symphonic 86
- Parité à distance 150
- Phase 41
- Phasing (effet) 86
- PHONES LEVEL
 commande de niveau 69
- Phones, voir C-R
- Pile
 carte RAM 101
- File de sauvegarde ii
- Pistes
 commutation (swap) 125
 copier 126

- effacer (clear) 126
 - effacer toutes 111, 126
 - fonction d'extraction 125
 - fonction écran AutoCopy 126
 - fonctions d'édition 125
 - fusionner (merge) 125
 - réglage 113
 - sélection 115
 - Pitch change 1 (effet) 89
 - Pitch change 2 (effet) 89
 - Program, fonction écran 141
 - Programmes
 - changements 141
 - Protection d'écriture
 - cartes RAM 101
 - Protection des mémoires de scènes
 - internes 102
- Q**
- Q, EQ
 - commandes 37
- R**
- RAM
 - charger des mémoires de scènes 102
 - fonction écran 101
 - formater une carte 101
 - installer une carte 101
 - mémoires de scènes 100
 - pile de carte 101
 - protection d'écriture 101
 - que sont les mémoires de scènes? 33
 - sélection de la banque 101
 - travail avec cartes RAM 101
 - vidage de blocs de données 144
 - Rappel des mémoires de scènes 103
 - REC Prm, fonction écran 113
 - Ré-initialiser
 - processeur de signaux numériques 139
 - système 137
 - RESET, EQ
 - touche 37
 - Restitution
 - automation 118
 - Retard (delay) 40
 - Retours de bande, voir canal de surveillance
 - Rev 1 hall A (effet) 85
 - Rev 1 hall B (effet) 85
 - Rev 2 room (effet) 85
 - Rev 3 vocal (effet) 85
 - Rev 4 plate (effet) 85
 - Reverse gate (effet) 88
 - Routing
 - canal d'entrée 42
 - canal de surveillance 50
 - canal stéréo 57
 - Routing, fonction écran
 - sélection d'entrée stéréo 54
 - sortie directe 55
- S**
- S/R Prm, fonction écran 105
 - Sauvegarder
 - données d'automation 127
 - données sur disquette 97
 - mémoires de scènes 102
 - Sélectionner
 - canaux 20
 - paramètres des fonctions écran 23
 - SHELF, EQ
 - touches LOW & HIGH 37
 - Slate 75
 - assignation du bus 76
 - régler l'oscillateur 77
 - SMALL LEVEL, commande 69
 - Small Monitors, voir C-R
 - SMALL, touche 69
 - Snapshot, voir mémoires de scènes
 - Solo
 - canaux de sécurité 68
 - cascade 148
 - commande de niveau AFL 67
 - fonction écran 68
 - mode AFL 67
 - mode SOLO 67
 - touche AFL 67
 - Sortie Bus 60
 - compteurs 60
 - niveaux de sortie 61
 - paires stéréo 61
 - régler le format 60
 - sorties numériques 60
 - surveiller 62
 - Sortie directe
 - canal d'entrée 35
 - canal de surveillance 48
 - canal stéréo 55
 - Sortie stéréo
 - balance 64
 - compteurs 64
 - fader 64
 - insertion 63
 - interdiction de copie 63
 - mise en forme du bruit 65
 - sorties numériques 63
 - touche ON 63
 - Sorties groupées 60
 - Sorties numériques
 - spécifications techniques 195
 - Spécifications techniques
 - entrées numériques 194
 - entrées/sorties analogiques 193
 - générales 192
 - sorties numériques 195
 - ST Pair, fonction écran 45
 - ST, touche 67
 - Stereo echo (effet) 88
 - STUDIO MONITOR LEVEL, commande 70
 - Surveillance
 - entrées du moniteur 2-TR 73
 - envois auxiliaires 72
 - sortie bus 62
 - Symphonic (effet) 86
 - Synchronisation
 - automation 109
 - Sys.Gen, fonction écran 136
 - SYS.Init, fonction écran 136
 - Système Audio/Vidéo 1 160
 - Système Audio/Vidéo 2 161
 - Système DMC1000 à 24 pistes 155
 - Système DMC1000/DRU8 153
- T**
- Talkback, fonction écran 76
 - Tampon d'édition
 - vidage de blocs de données 144
 - Taquets de protection de mémoire
 - disquettes 96
 - Temps d'estompement 107
 - Temps de chute
 - réglage 80
 - Temps de pointe
 - réglage 80
 - Temps de prise en charge 120
 - Terminologie 2
 - Time Code, fonction écran 110
 - Time Code, voir code de temps
 - Title.Ed, fonction écran 104
 - Titrer
 - mémoires de scènes 104
 - Touche
 - [MON] 37
 - [RESET] 37
 - AFL 67
 - AUTO 108
 - CUE MON 70
 - CUE ON 70
 - CUE, C-R monitor 66
 - DIM ON 68
 - EXT, C-R monitor 66
 - GLOBAL 95
 - HIGH [SHELF] 37
 - LOW [SHELF] 37
 - MIX 31
 - MONO, C-R monitor 67
 - NEXT 21
 - PREV 21
 - REC 31

SMALL 69
SOLO AFL 67
ST, C-R monitor 67
STUDIO MONITOR ON 70
UNDO 21
Touche EQ de dérivation
 canal d'entrée 36
 canal de surveillance 49
 canal stéréo 56
Touche ON d'étouffement
 canal d'entrée 42
 canal de surveillance 50
 canal stéréo 57
Touche SOLO
 canal d'entrée 43
 canal de surveillance 51
 canal stéréo 58
Touches
 AUX SEND ON 71
 CH SELECT 20
 Console status 31
 de canaux [SEL] 20
 de Routing [MON] 31
 Flip 31
Touches ON
 sortie stéréo 63
Touches SHELF 37
Trk.Edit, fonction écran 111, 125
Types de fichiers
 disquettes 96

U

UserBit
 fonction écran 133
Utiliser
 effets externes 84
 effets internes 83

V

Vidage de blocs de données
 assignation de contrôleurs 144
 assignations de changements de
 programme 144
 carte RAM 144
 cascade 149
 demande de transfert 205
 Device No 143
 données d'installation 144
 explications 33
 fonction écran Bulk 143
 format 202
 Interval 143
 Omni 143
 tampon d'édition 144

Y

Y1, voir Format
Y2, voir Format
Yamaha
 équipements supplémentaires 185
 format DIN à 8 broches 130

YAMAHA