


Quick Operation Guide

While holding down the highlighted leftmost keys shown below, press the other highlighted keys to set the various parameters. (Refer to the diagram **4**/**5**/**6** below.)

While holding down the [DEMO/SONG] and [PIANO/VOICE] buttons, press the highlighted keys shown below to set parameters. (Refer to the diagram **7** below.)


4

Tune Up: in about 0.2Hz steps (Press any highlighted key)

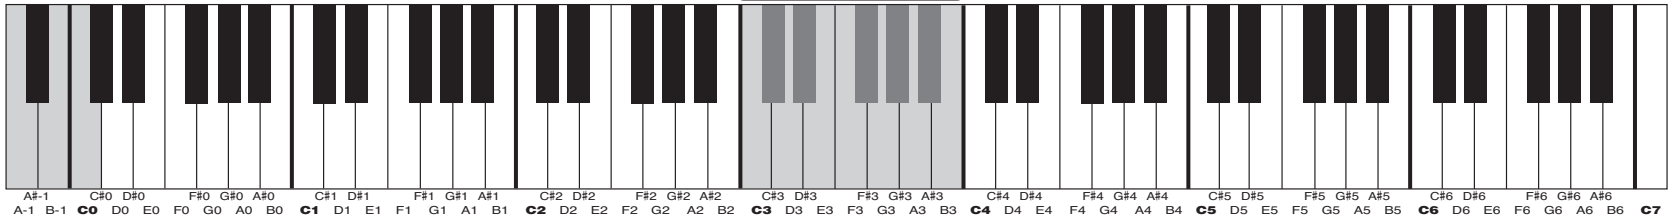


5

Tune Down: in about 0.2Hz steps (Press any highlighted key)

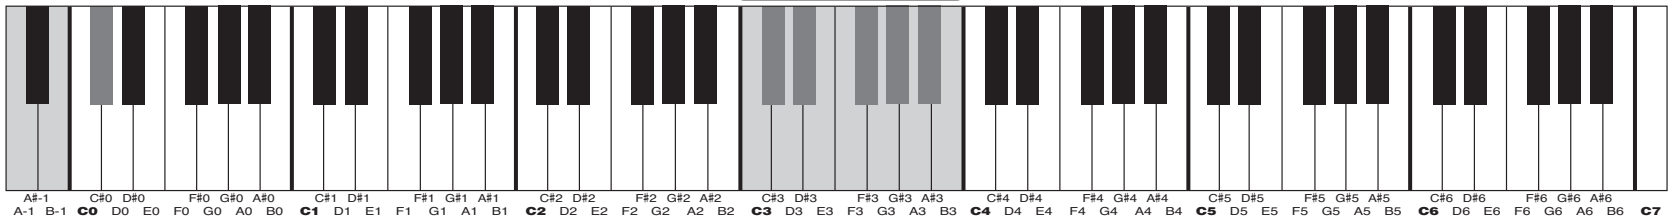


6

Standard pitch : 440.0 Hz (Press any highlighted key)

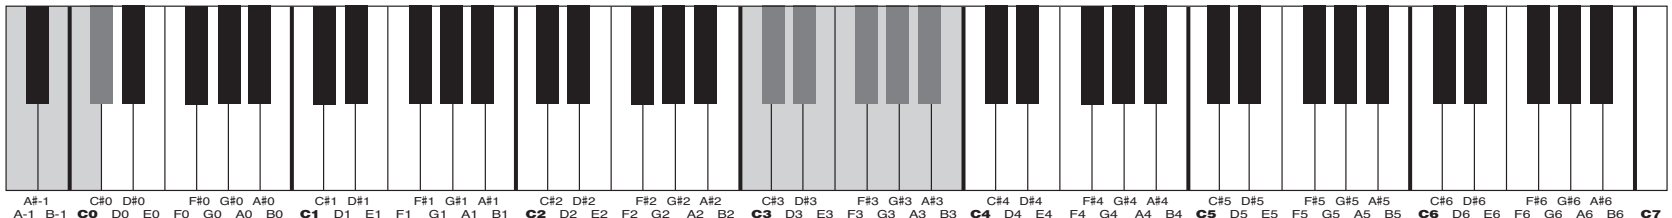

7

 

MIDI Transmit Channel

Transpose

MIDI Receive Channel

Local Control **Program Change** **Control Change** **Song Playback Channel**

